


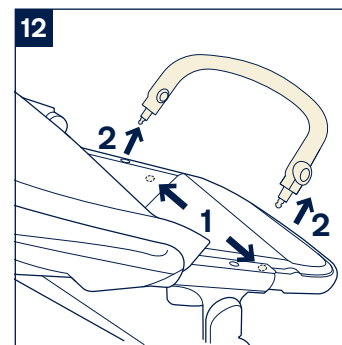
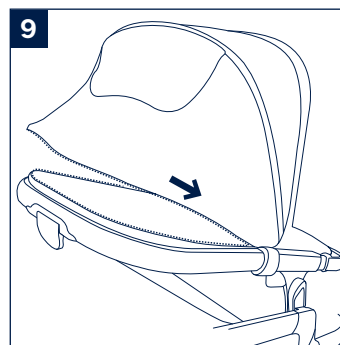
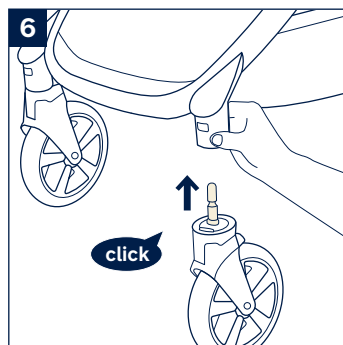
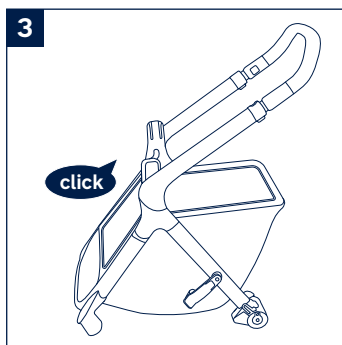
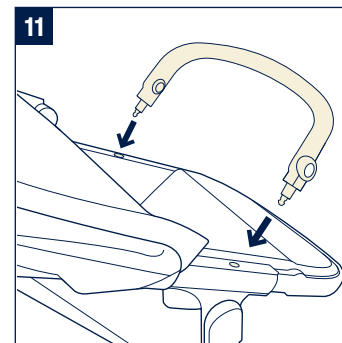
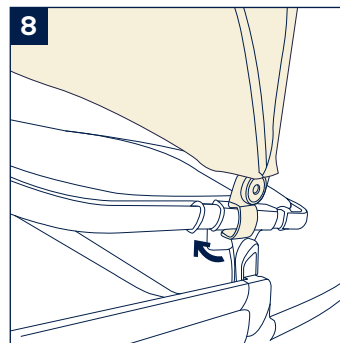
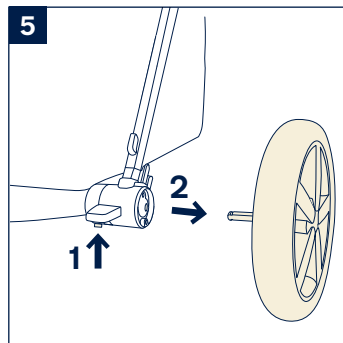
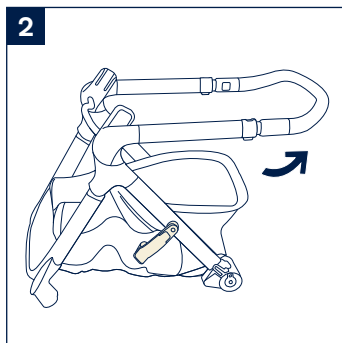
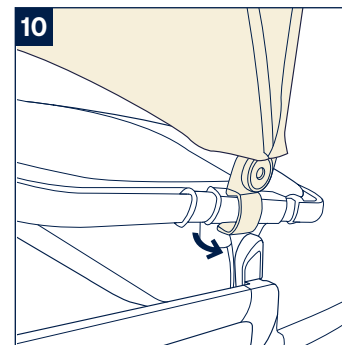
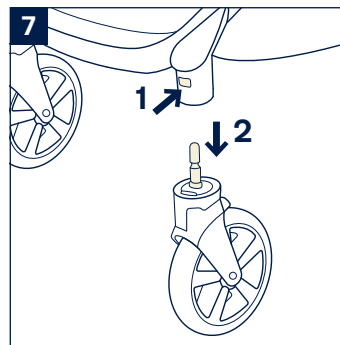
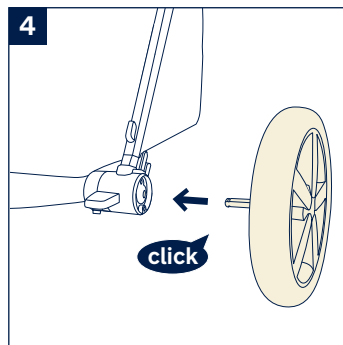
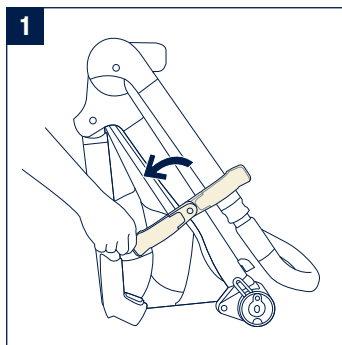
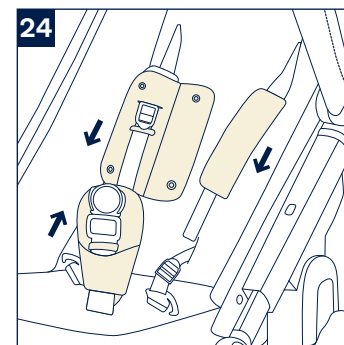
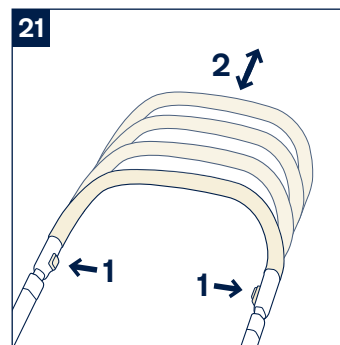
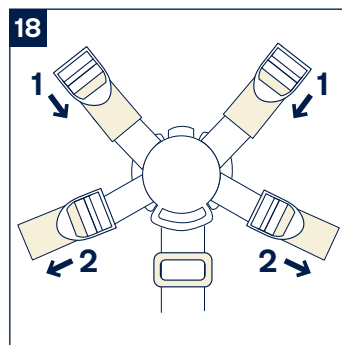
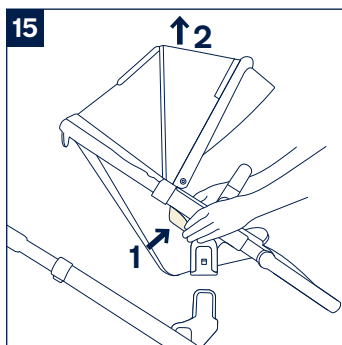
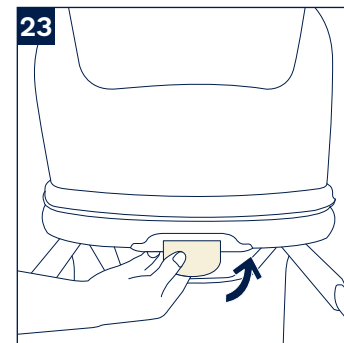
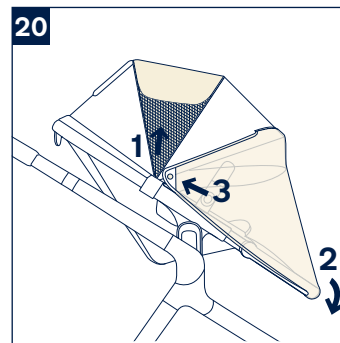
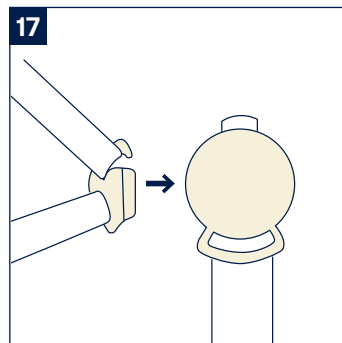
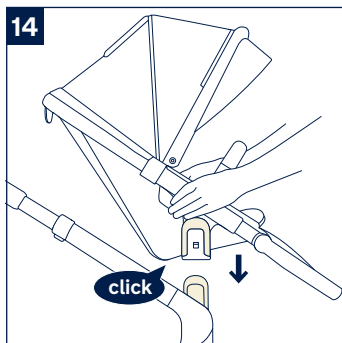
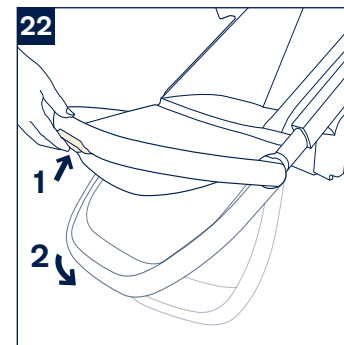
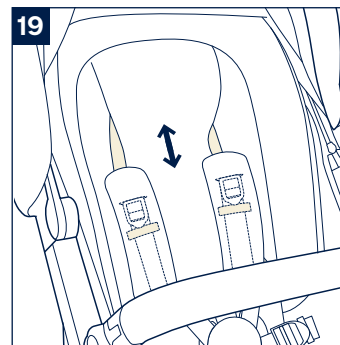
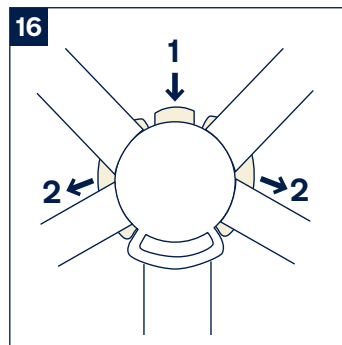
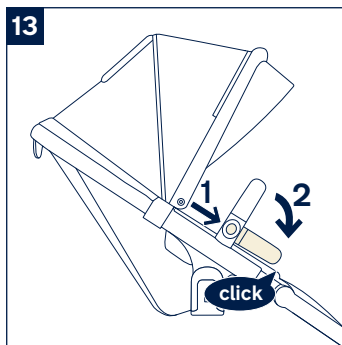
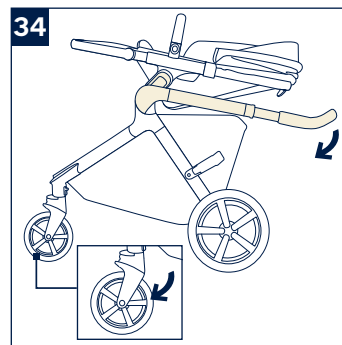
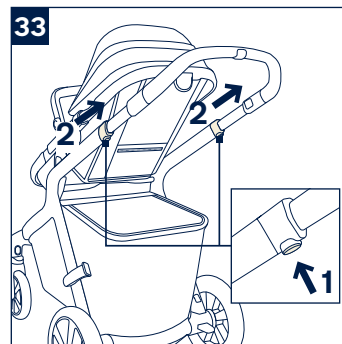
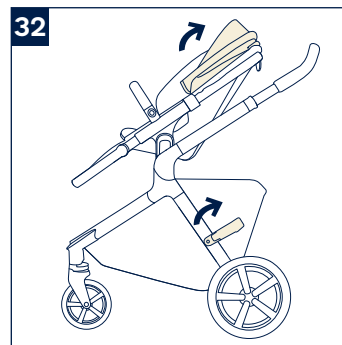
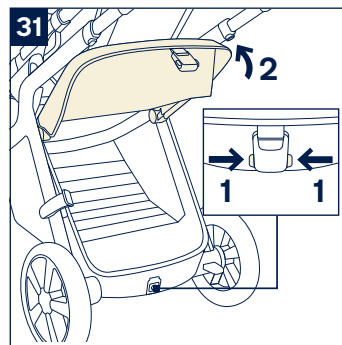
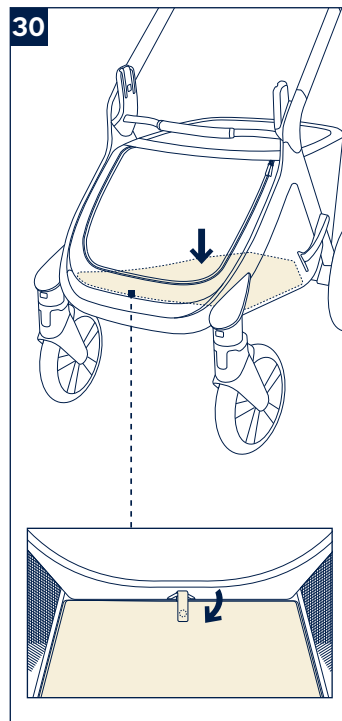
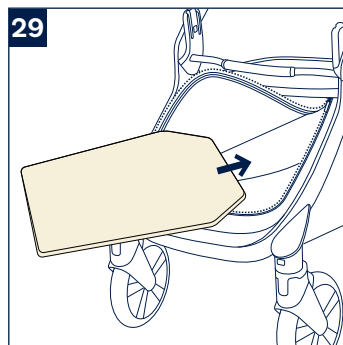
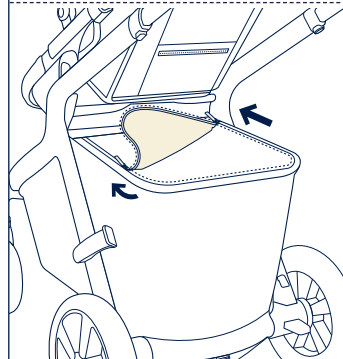
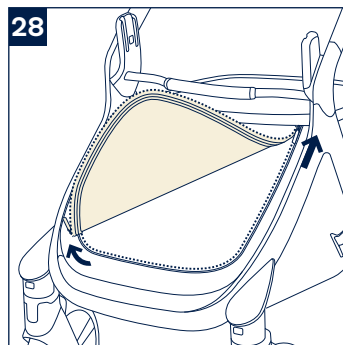











**重要! 請詳細閱讀並
保留以備參照!**

使用產品前請仔細閱讀說明書，
並妥善保存說明書以便日後參考。

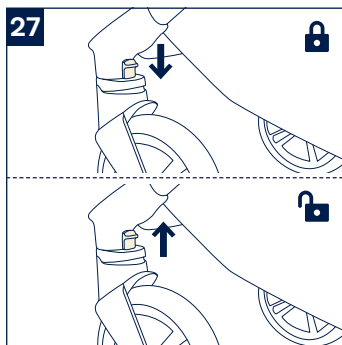

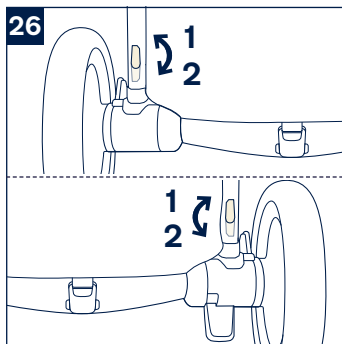

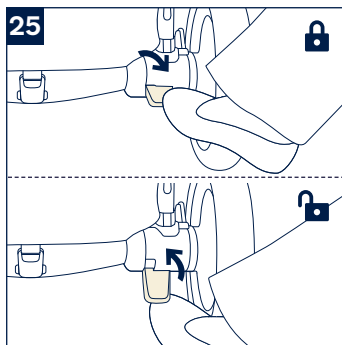

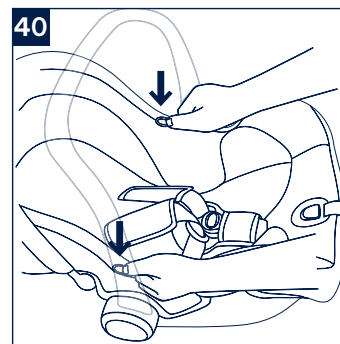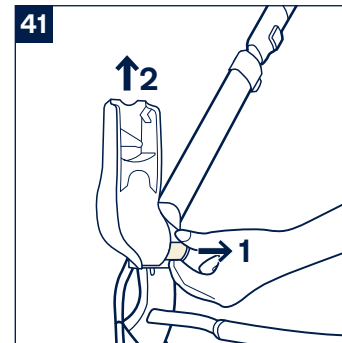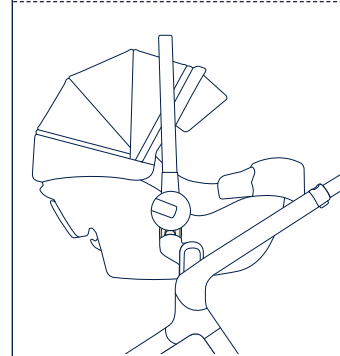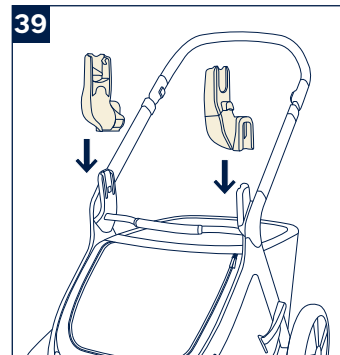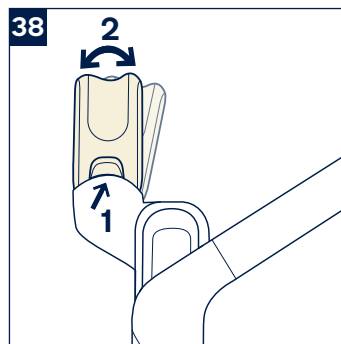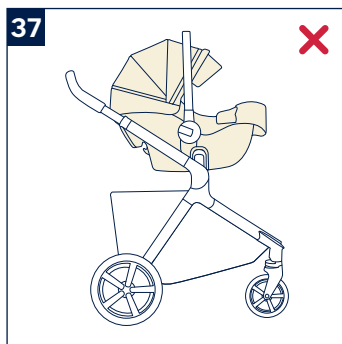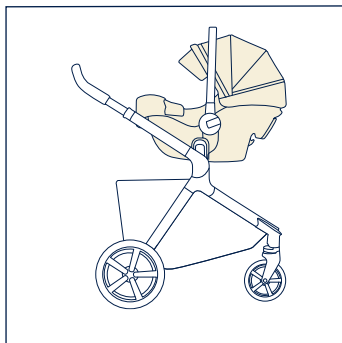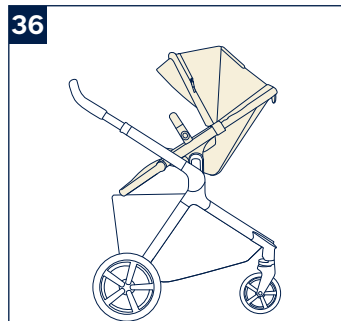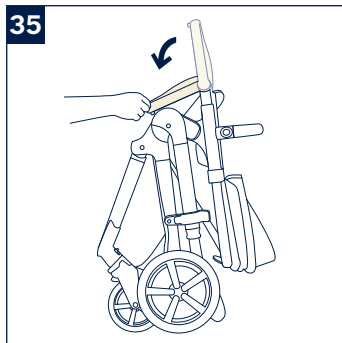

Designed
around your life



目錄

產品資訊	2
保固與售後服務	
保固條件	
聯絡我們	
適用範圍	3
警告	4
產品組件及各部位名稱	10
安裝手推車	12
產品使用	13
位置選擇	16
使用配件	16
維護與保養	17
English	18

產品資訊

產品名稱：_____

生產日期：_____

保固與售後服務

產品於保固期間內發生問題，請與零售商聯絡；若零售商無法提供服務，他們會聯絡當地的Nuna經銷商。產品在正常使用和老化中產生的自然磨損與劣化，並不在保固範圍內。當車輪磨損過度時，請向本公司或代理商聯繫更換(需支付費用)。請留意產品底部的產品型號與生產日期序號。

當有保固需求時，請提供以上產品資訊。

請至www.nunababy.com/tw/gear-registration

網站登記您購買的產品。

保固條件

保固始於產品購買日，我們提供維修服務，但不提供產品退換。保固期限不會因零件更換或維修而延長。Nuna有權利針對產品進行改善設計，此前製造的產品則無更換義務。相關保固資訊，詳見官網：www.nunababy.com/tw/warranty

聯絡我們

我們期望不斷改進並開發新的產品，請隨時告知您對Nuna產品的意見和建議。

taiwanservice@nunababy.com

www.nunababy.com/tw

產品名稱

手推嬰幼兒車

型號

DEMI icon

主要材質

塑膠、鋁合金／五金、布

原產地

中國

製造年份

請見產品上生產日期標(年／月／日)

注意事項及緊急處理方法：

使用本產品時，請詳閱使用說明書及注意事項。

發生意外時，應盡速就醫急救。

適用範圍

寶寶需要滿足下列要求

最大體重：22公斤

嬰幼兒年齡：6-48個月

當推車車架搭配Nuna汽車椅，注意說明書內寶寶的適用範圍。

警告

Nuna DEMI icon 手推嬰幼兒車擁有專利並符合臺灣標準 CNS 12940-2:2022 和歐盟安全標準 EN 1888-2:2018+A1:2022 相關規範。

重要：請務必依照產品說明書和警告以避免導致嚴重傷害甚至是死亡事件發生。

- ！ 本座椅單元不適用6個月以下嬰兒。
- ！ 為避免手指夾傷問題，收合及展開手推嬰兒車時，請務必小心。
- ！ 切勿讓嬰幼兒單獨留在手推車內而無人看護。
- ！ 請保留說明書以便日後使用。
- ！ 寶寶乘坐時，安全帶或束縛系統必須正確的扣合及使用。
- ！ 請勿允許您的嬰幼兒將手推車當玩具玩耍。
- ！ 使用前，請確保所有鎖定裝置都已處於鎖定狀態。
- ！ 本產品不適用於跑步和滑冰。
- ！ 當調整手推車上之任何可活動配件時，必須確定寶寶與手推車保持安全距離。
- ！ 保持寶寶遠離遮陽篷/雨篷以免造成窒息。
- ！ 請使用Nuna原廠零配件。
- ！ 未經製造商認可附件不得使用。
- ！ 使用前請確定各部件安裝牢固以確保安全。

- ！ 停止車台時，手推車務必確實使用制動裝置。
- ！ Nuna不保固使用其它廠商提供的零配件所造成的損害。
- ！ 任意放置未經製造商核可之物品於車臺上將造成危險。
- ！ 不得附載其它的嬰幼兒、物品或附件於推車上。
- ！ 不可將手推車放置於馬路、坡道或危險場所。
- ！ 寶寶乘坐於手推車內時，不可將整個手推車往上提。
- ！ 使用時請扣好安全帶，以免寶寶滑入腿部開口外而造成窒息。
- ！ 使用時請遠離火源、高溫、水池或電源之附近範圍。
- ！ 請勿在遮陽篷上放置任何物品。
- ！ 請勿將產品放置潮濕的環境中。請自然風乾手推車上的布料，並避免使用直接熱源烘乾。
- ！ 請勿將嬰幼兒放到置物籃內。
- ！ 如果有任何零件損壞，磨破或丟失，請停止使用該產品。
- ！ 為防止手推車危險或不穩定的情況，請勿放置超過置物口袋與置物籃建議重量的物件。
- ！ 本商品不可放置於機車踏墊使用，亦不可以連結器連接其他手推嬰幼兒車使用。
- ！ 不可讓嬰幼兒站立。

- ！ 為避免窒息危險，請將小零件存放到嬰幼兒接觸不到的地方。
- ！ 請注意在粗糙地面使用時，反復衝擊會損壞手推嬰兒車。
- ！ 一次僅能乘坐一位嬰幼兒。
- ！ 禁止在樓梯上使用手推車。
- ！ 安全帶或束縛系統必須正確的扣合及使用。且安全帶與束縛系統的使用，不能取代成人的看護。
- ！ 嬰幼兒放入或抱出手推車時，務必確認剎車已處於鎖定狀態。
- ！ 使用前應確實豎立及固定各機構以確保安全。
- ！ 超載、不正確的收合、使用非經核准的零配件都可能造成手推嬰兒車損壞、故障或不安全，請務必閱讀說明書。
- ！ 輪胎可能會在某些表面留下黑色痕跡，特別是光滑的表面，像木地板、合層板和亞麻油地板。
- ！ 請勿將任何繩索或索帶類物件懸掛於嬰幼兒頸部附近，或扣在產品及玩具上，以免導致嬰幼兒意外窒息。
- ！ 使用手推車之前，請務必去掉、銷毀或是將所有附加包裝遠離嬰幼兒，以防嬰幼兒窒息。
- ！ 此手推車適用最大載重**22公斤**嬰幼兒使用。
- ！ 使用前，確保所有鎖定裝置皆已啮合。

- ！ 乘載超過**22公斤**的重量，將會導致手推車的重度磨損以及過重的負荷。
- ！ 請勿擺放超過**15公斤**的物件於置物籃以及**0.45公斤**的物件於置物口袋內，以免導致手推車不穩定而產生危險。
- ！ 當結合汽車椅使用時，本產品不可代替睡床使用。若您的寶寶需要睡眠時，請讓寶寶睡在合適的睡床上。
- ！ 安全帶扣具組含有磁鐵，會影響某些醫療器材的運作。若您的孩子有使用這類醫療器材，禁止磁鐵靠近孩子與醫療器材，請勿使用此推車。請與**Nuna**聯繫進一步討論方案。
- ！ 請注意安全帶扣具組中的磁鐵可能與某些電子設備產生作用。
- ！ 切勿留置嬰幼兒無人照顧。
- ！ 使用前查核座椅單元或汽車安全座椅之連接裝置是否正確啮合。
- ！ 為避免傷害，確保展開與折疊本產品時與兒童保持距離。
- ！ 不要讓兒童玩弄本產品。
- ！ 務必隨時使用束縛系統。
- ！ 本產品僅設計供步行使用。
- ！ 為防止事故發生，確保手推嬰兒車遠離自動閉合之門（例：在火車或電梯上）。
- ！ 放置與抱起嬰幼兒時，啮合駐車裝置。

- ！ 把手及/或靠背後方及/或手推嬰幼兒車側面的任何掛載將會影響手推嬰幼兒車穩定性。
- ！ 僅限使用製造商/經銷商所提供或建議的替換零件。
- ！ 當嬰幼兒需睡眠時，請將之放置於合適的嬰兒床。
- ！ 僅能以步行速度在平坦地面移動，嚴禁慢跑、奔跑、上下樓梯、搭乘手扶梯或行走於崎嶇地面。
- ！ 欲調整手推嬰幼兒車時，務必先確定已將嬰幼兒移開，否則可能造成嬰幼兒受傷。
- ！ 嬰幼兒應同時使用腰部及胯部的安全帶。

置物籃非設計用於載運寵物，若攜帶寵物，風險由監護人自行承擔，請務必遵守以下規定：

- ！ 寵物與貨物總重量不得超過置物籃承載上限，寵物必須完全置於籃內，不得有四肢伸出。
- ！ 切勿將牽繩或繫帶固定於置物籃或車架，避免傾倒、勒頸或夾傷。
- ！ 若置物籃有蓋子，移動時必須保持閉合，切勿讓寵物單獨留在籃內無人看護。
- ！ 寵物若出現壓力或過熱徵兆，請立刻停止。


Note

產品組件及各部位名稱

組裝前請確認所有部件已經齊全。如有遺漏，請與銷售商聯繫。本產品無需工具進行組裝。

！ 窒息危險：務必去掉、丟棄每個車輪或輪軸的保護套。

- | | |
|--------------|-----------|
| 1 前輪 (2個) | 14 上座椅固定座 |
| 2 後輪 (2個) | 15 車架 |
| 3 汽車椅卡座 (1組) | 16 收合鉤 |
| 4 雨篷 | 17 置物籃 |
| 5 遮陽篷 | 18 背靠調整按鈕 |
| 6 座墊 | 19 車手調整按鈕 |
| 7 扶手 | 20 收合按鈕 |
| 8 肩帶護片 | 21 第二道安全鎖 |
| 9 小腿靠 | 22 置物口袋 |
| 10 車手 | 23 避震調整按鈕 |
| 11 扶手調整按鈕 | 24 剎車踏板 |
| 12 座椅釋鎖按鈕 | 25 小座墊 |
| 13 扣具和胯帶護片 | 26 耐用墊 |

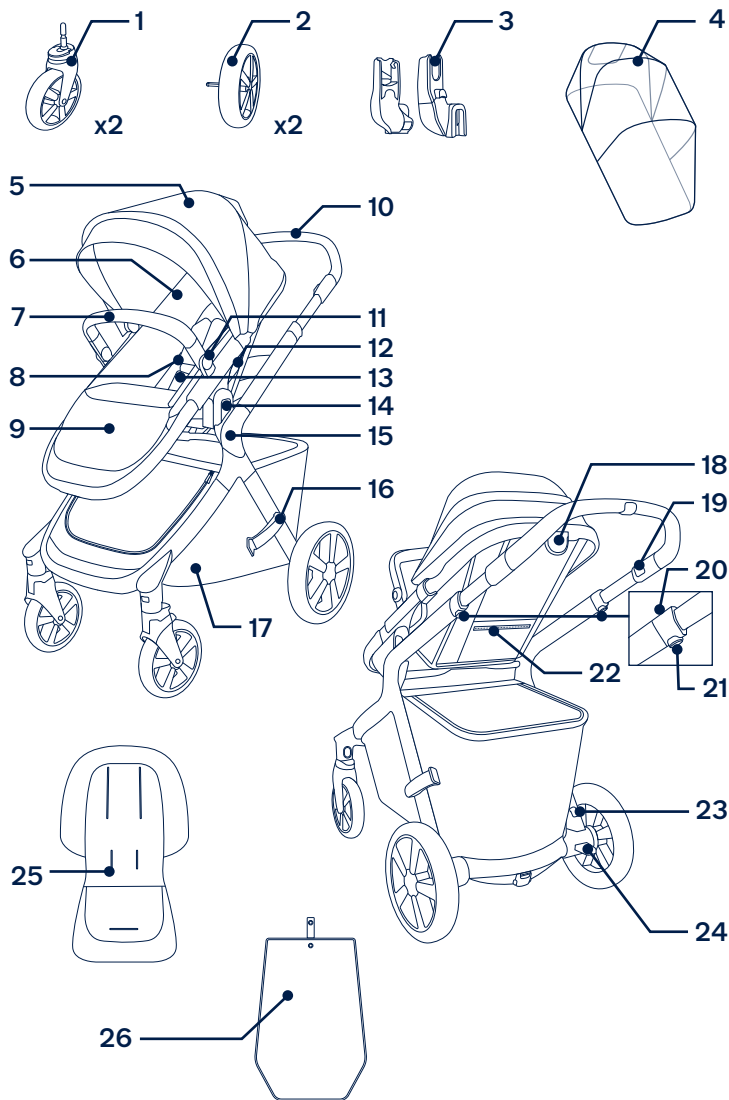

安裝手推車

打開手推車

- 1- 推開收合鉤。(1)
- 2- 將車手向上方拉起。(2)
- 3- 聽到“咔嚓”聲表示手推車已打開到位。(3)
安裝前，請先檢查確認手推車已完全打開。

後輪

- 1- 將後輪套入後腳，聽到“咔嚓”聲表示後輪已安裝到位(4)
檢查輪子是否已正確固定。
- 2- 按壓後輪釋鎖按鈕(5)-1，同時向外拉(5)-2，即可拔出後輪。

前輪

- 1- 將前輪套入前腳，聽到“咔嚓”聲表示前輪已安裝到位。(6)
檢查輪子是否已正確固定。
- 2- 按壓前輪釋鎖按鈕(7)-1，同時向下拉(7)-2，即可拔出前輪。

遮陽篷

- 1- 將兩個遮陽篷卡座分別安裝到座椅固定座上。(8)
- 2- 拉好拉鏈。(9)
- 3- 打開拉鏈，然後將遮陽篷卡座取下，即可拆卸遮陽篷。(10)

扶手

- 1- 將扶手卡座對準扶手卡槽插入，聽到“咔嚓”聲表示扶手已安裝到位。(11)
- 2- 按壓座墊兩側下方的釋鎖按鈕(12)-1，同時向外拉即可拆卸扶手。(12)-2
- 3- 為了讓收合體積更小，按壓扶手兩側調整按鈕(13)-1可將扶手往下旋轉(13)-2聽到“咔嚓”聲表示已調整完成。
！ 只能於收合時將扶手調整至此段位。請勿於推車內有孩童時使用此扶手段位。

手推車座椅

手推車座椅可以前向&後向安裝。

- 1- 將手推車座椅向下安裝在座椅固定座上，聽到“咔嚓”聲表示座椅已安裝到位。(14)
- 2- 按壓座椅釋鎖按鈕(15)-1，同時向上抬起(15)-2，即可移除座椅。

產品使用

寶寶乘坐

- 1- 按下安全扣按鈕(16)-1，安全扣會自動鬆開(16)-2。
將寶寶放入座椅內。
- 2- 將肩帶扣插入腰帶扣，再將他們插入母扣內會自動扣合。(17)
- 3- 滑動織帶以調整肩帶長度(18)-1，拉緊腰部織帶(18)-2，使寶寶更加舒適。

肩帶位置

- 1- 移動肩帶上端，即可上下調整肩帶位置。(19)

遮陽篷

- 1- 將遮陽篷向前推，即可打開遮陽篷。向後拉即可收合遮陽篷。
- 2- 拉開遮陽篷拉鍊拉出透氣網罩。
- 3- 透氣網罩使用方式與操作，請參考圖示。(20)

車手

為方便推行，車手有4種段位可供調節。

- 1- 按壓車手兩側的調整按鈕(21)-1，同時向前或向後移動車手至適合段位。(21)-2

小腿靠

依不同使用需求，小腿靠共有2個段位可供調節。

- 1- 段位調高時，將小腿靠支撐板由下往上推即可。
- 2- 段位調低時，按壓小腿靠中間的調整按鈕(22)-1，同時向下調節小腿靠支撐板。(22)-2

背靠

依不同使用需求，背靠共有4個段位可供調節。

- 1- 調高或調低背靠角度時，拉起背靠調整按鈕，將背靠向上或向下推即可。(23)

小座墊

當天氣炎熱時，可拆卸小座墊直接使用透氣通風的網孔座椅。

- 1- 欲拆卸小座墊，請將小座墊上方與推車連接的黏扣帶解開，按壓安全扣中間按鈕，打開安全扣，將扣具穿過小座墊即可取掉小座墊。(24)

剎車踏板

- 1- 準備剎車時，踩下剎車踏板後方，即可完成剎車動作，打開剎車時，向上抬起剎車踏板，即可完成釋鎖動作。(25)
! 手推車停止前進時，請鎖定剎車踏板。輕推手推車保證剎車踏板已完全鎖定。

避震系統

避震系統(26)-1往上調軟，適用於粗糙的路面(26)-2往下調硬，適用於平滑的路面。

前輪定向

當在碎石路面或不平路面推行時，建議鎖定前輪，便能更輕鬆地操控手推車。

- 1- 將前旋鎖向上拉以解鎖前輪。將前旋鎖向下推以鎖定前輪。(27)

置物籃

- 1- 置物籃的前拉鍊和後拉鍊可以打開，方便使用。(28)
- 2- 將耐用墊放入置物籃中(29)，並扣上按鈕。(30)
- 3- 按下扣具以打開置物籃。(31)

收合手推車

收合手推車前，請將車手調整到第3段並確保前輪定向已釋鎖，方便收合後站立。

手推車可以在座椅前向的情況下收合，也可以在不裝座椅的情況下收合。

車架可以與前向座椅或沒有座椅時收合。如果與座椅收合時需將背靠調整至最斜躺位置。

- 1- 收攏遮陽篷，將收合鉤向外旋轉。(32)
- 2- 按壓車手兩側的第二道安全鎖並將收合按鈕向上拉。(33)
- 3- 將車手向下旋轉並扣合收合鉤。(34)
- 4- 向下收合小腿靠，收合尺寸更小方便儲存。(35)

位置選擇

- 1- 手推車車架可與座椅或Nuna汽車椅(包括使用汽車椅卡座)組合使用。(36)
- ! 請勿使用圖(37)組合模式。

使用配件

! 因產品型號的不同，並非所有手推車均附以下配件。

汽車椅卡座

關於汽車椅的組裝和使用有任何問題，請參考汽車椅說明書。汽車椅的角度可以通過可調整的卡座進行調整。(38)

- 1- 汽車椅卡座安裝時，僅能後向方式安裝。(39)
 - 2- 移除汽車椅，按壓汽車椅兩側的釋鎖按鈕(40)同時向上提起汽車椅即可。
 - 3- 移除汽車椅卡座，向外拉起汽車椅卡座上的釋鎖按鈕(41)-1同時向上提起汽車椅卡座即可。(41)-2
- ! 收合手推車前，請先移除汽車椅。

DEMI™ icon 雨篷

雨篷只可以安裝在座椅上。(42)

- 1- 雨篷安裝在座椅上。

維護與保養

可用濕布清潔車架和座布，請勿使用研磨劑或漂白劑。請勿使用潤滑劑，因為它們會吸附灰塵和污垢。請勿將手推車儲存在潮濕的地方。

當心地板清潔產品和表面處理可能會影響到手推車輪子的狀況。為避免這種情況，請勿將手推車放在木地板上。請在手推車下方放置地毯、墊子或紙板等保護物。

請定期以水清洗輪子，並清除污垢。

為使手推車能長期使用，下雨天使用後，請用軟質可吸水的布擦拭手推車。

請參考手推車上洗滌標版內容的洗滌方式。

長期使用之後，在正常狀況下，座布可能產生褪色、磨損或撕裂。

為確保安全，請使用Nuna原廠零配件。

請定期檢查您的手推車功能是否正常與零件是否鬆弛磨損或脫落。一旦發生以上任何狀況，請立即停止使用本手推車。

請隨時檢查束縛系統的日字扣，扣具和整個安全帶(包括任何點)是否完好無損。

如有任何磨損，裂紋或破損情況。請立即停止使用。

**IMPORTANT!
READ CAREFULLY
AND KEEP FOR FUTURE
REFERENCE**

Contents

Product Information	20
Product Registration	
Warranty	
Child Usage Requirements	20
Warnings	21
Parts List	26
Product Set Up	28
Product Use	29
Seating Option Use	32
Accessories	32
Cleaning and Maintenance	34

Product Information

Model Number: _____

Manufactured Date: _____

Product Registration

Please fill in the above information. The model number and the manufactured date are located on a label on the stroller frame.

To register your product please visit:

www.nunababy.com

Click the “Register Gear” link on the homepage.

Warranty

We have purposely designed our high-quality products so that they can grow with both your child and your family. Because we stand by our product, our gear is covered by a custom warranty per product, starting from the day it was purchased. Please have the proof of purchase, model number and manufactured date available when you contact us.

For warranty information please visit:

www.nunababy.com

Click the “Warranty” link on the homepage.

Child Usage Requirements

This stroller seat is suitable for use with children who meet the following requirements:

The stroller is intended for children from 6 months up to 22kg or 4 years whichever comes first.

When using the stroller frame with the Nuna infant carrier, refer to the child usage requirements listed in those instruction manuals.

WARNING

Failure to follow these warnings and instructions could result in serious injury or death.

Always use the restraint system.

This seat unit is not suitable for children under 6 months.

Check that the seat unit or car seat attachment devices are correctly engaged before use.

Do not let the child play with this product.

Ensure that all the locking devices are engaged before use.

Never leave the child unattended.

This product is not suitable for running or skating.

To avoid injury ensure that the child is kept away when unfolding and folding this product.

Accessories which are not approved by the manufacturer shall not be used. Only replacement parts supplied or recommended by the manufacturer/distributor shall be used.

Adult assembly required.

Any load attached to the handle and/or on the back of the backrest and/or on the sides of the vehicle will affect the stability of the vehicle.

DO NOT carry additional children, goods, accessories in or on the stroller except as permitted in this manual. They may cause the stroller to become unstable.

DO NOT leave the stroller exposed in the vicinity of a strong source of heat i.e. a radiator or open fire.

DO NOT place any item on the canopy.

DO NOT store the stroller in a damp place. Always allow the fabric to dry naturally away from direct heat.

DO NOT use storage basket as a child carrier.

DO NOT use the stroller if any parts are damaged or missing.

For car seats used in conjunction with a chassis, this vehicle does not replace a cot or a bed. Should your child need to sleep, then it should be placed in a suitable bed.

Keep small parts away from children as they pose a choking hazard.

Negotiate curbs and rough ground carefully. Repeated impact could cause damage to the stroller.

The parking device shall be engaged when placing and removing the children.

NEVER allow children to stand on the stroller.

NEVER use the stroller on stairs or escalators. You may suddenly lose control of the stroller or your child may fall out.

NEVER carry more than one child at a time in the stroller.

Overloading, incorrect folding, and the use of accessories e.g. child seats, bag hooks, rain covers, buggy boards, etc... other than those approved by Nuna may damage or make the stroller unsafe.

STRANGULATION HAZARD Do not place items with a string around your child's neck, suspend strings from this product, or attach strings to toys.

To avoid any danger of suffocation, remove all plastic covers before using this item and destroy or keep away from babies and children!

To prevent a hazardous, unstable condition, do not place more than 15 kg in the storage basket and more than 0.45 kg in the storage pocket.

ALWAYS check ventilation when the rain cover is on the product.

ALWAYS check that the rain cover has been cleaned and dried before folding.

DO NOT fold the pushchair when the rain cover is attached.

DO NOT place your child in the pushchair in hot weather with the rain cover attached.

Make sure the harness is adjusted properly and your child is snugly secured. The space between the child and the shoulder harness should be about the thickness of one finger. **DO NOT** cross the shoulder belts. This will cause pressure on your child's neck.

USE the most reclined position for new born babies.

Magnetic Harness Buckle: The buckle and buckle clips contain magnets. If your child has a medical condition that prohibits the use of magnets near the child, do not use the stroller. Contact Nuna to discuss a solution.

Be mindful of the possible interaction of magnets in buckles and certain electronic devices.

Using the storage basket for pets (optional)

The storage basket is primarily intended for cargo. Carrying dogs/cats in the basket is not part of the intended use and is done solely under the supervising person's responsibility. If you choose to do so, strictly follow these precautions:

Pet + cargo must not exceed the permitted basket load; the pet must fit entirely inside without limbs hanging out.

DO NOT tether/leash to the frame or basket; risk of tipping/strangulation/entrapment.

Walking pace only on smooth ground; no jogging, running, stairs, escalators, or rough terrain.

Keep the basket closed while moving (if applicable) and never leave the pet unattended.

Stop immediately if the pet shows signs of stress/overheating.


Note

Parts List

Make sure all parts are available before assembly.
If any part is missing, please contact local retailer. No tools are required for assembly.

! CHOKING HAZARD: Remove and immediately discard protective end caps from each wheel and wheel hub axle.

- | | |
|-------------------------------------|--|
| 1 Front Wheel (x2) | 15 Stroller Frame |
| 2 Rear Wheel (x2) | 16 Storage Latch |
| 3 Infant Carrier Post Adapters (x1) | 17 Storage Basket |
| 4 Rain Cover | 18 Recline Adjustment Button |
| 5 Canopy | 19 Handle Adjustment Button |
| 6 Seat Pad | 20 Folding Button |
| 7 Arm Bar | 21 Secondary Lock |
| 8 Shoulder Harness Pad | 22 Storage Pocket |
| 9 Calf Support | 23 Custom Dual Suspension Adjustment Lever |
| 10 Stroller Handle | 24 Brake Lever |
| 11 Arm Bar Adjustment Button | 25 Insert |
| 12 Seat Release Button | 26 Durable Pad |
| 13 Buckle and Crotch Cover | |
| 14 Upper Seat Mount | |

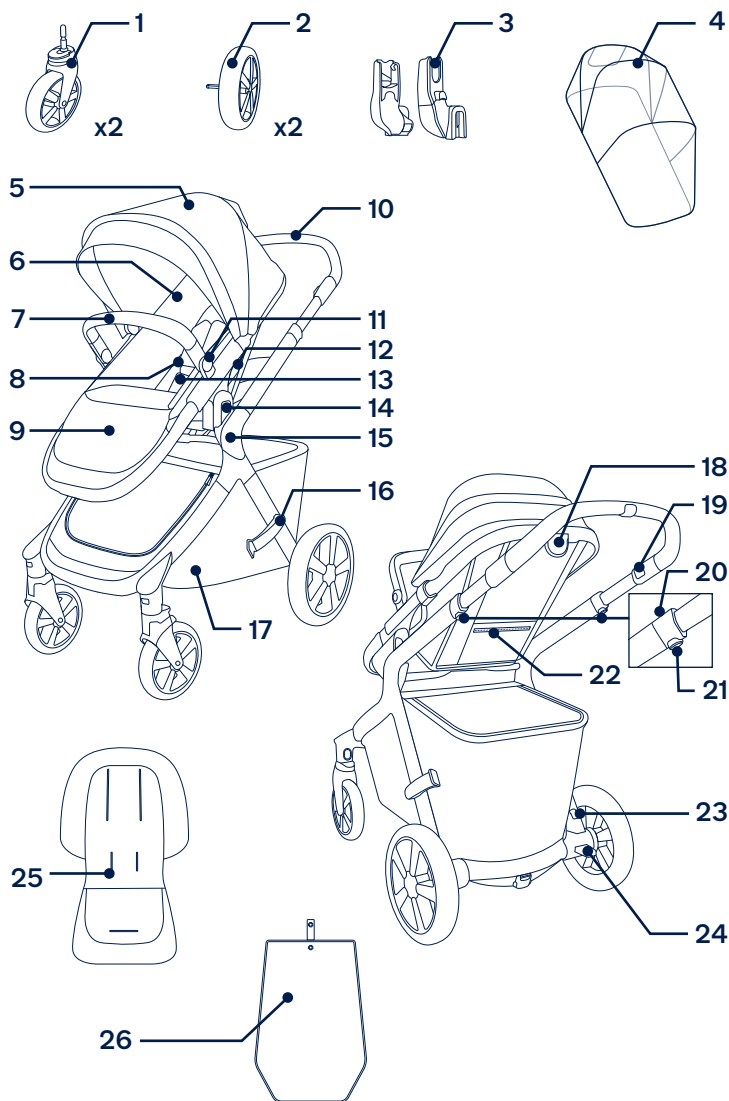

Product Set Up

Open Stroller

- 1 - Separate the storage latch from the storage mount. (1)
- 2 - Then, rotate the stroller handle up. (2)
- 3 - A “click” sound means the stroller frame is open completely. (3)

Check the stroller frame is completely latched open before continuing.

Rear Wheels

- 1 - Insert the rear wheel into the rear leg. A “click” sound means the rear wheel is assembled completely. (4)
- 2 - To remove the rear wheel, press the release button (5)-1 and detach the rear wheel from the rear leg (5)-2.

Front Wheels

- 1 - Insert the front wheel into the front leg. A “click” sound means the wheel is assembled completely. (6)
- 2 - To remove the front wheel, press the release button (7)-1 and detach the front wheel from the front leg (7)-2.

Canopy

- 1 - Clip the canopy mount onto the seat on each side. (8)
- 2 - Zip the canopy to the seat. (9)
- 3 - To remove the canopy, open the zippers, then remove the canopy mounts. (10)

Arm Bar

- 1 - Align the arm bar ends with the arm bar mounts, and

insert until it clicks into place. A “click” sound means the arm bar is assembled completely. (11)

- 2 - To remove the arm bar, press the arm bar release buttons (12)-1 located under seat pad, and remove the arm bar. (12)-2
- 3 - For a more compact fold, press the armbar adjustment buttons (13)-1 and rotate the armbar down (13)-2 until it clicks into place.
- ! Only use the down/stored position for folding. **NEVER** use this position with child in stroller.

Switch seat

The seat can be attached rear or forward facing.

- 1 - Align the sides of the seat with the seat mounts. Place the seat directly down until it clicks into place. A “click” sound means the seat is assembled completely. (14)
- 2 - To remove the seat, squeeze the seat release buttons (15)-1 and lift the seat up (15)-2.

Product Use

Securing Your Child

- 1 - Push the top button on the buckle (16)-1 to release the buckle latch and remove the magnetic clips (16)-2. Place your child in the stroller.
- 2 - Insert the magnetic clips into the buckle. (17)
- 3 - Fit the harness snugly to your child by sliding the adjustment straps to tighten (18)-1. Then pull the waist adjustment straps out (18)-2.

Shoulder Harness Position

- 1 - The upper shoulder harness buckles can be moved up and down for added adjustment. **(19)**

Canopy

- 1 - To open the canopy, pull the canopy toward the front of the seat, and to fold, push it back.
- 2 - Open the zipper on the canopy, then pull down the airy mesh drape for full coverage and privacy.
- 3 - Operate and use airy mesh drape shown as. **(20)**

Handle

The handle has 4 positions.

- 1 - To adjust the height of the handle, press the handle adjustment button **(21)-1** and pull the handle up or down. **(21)-2**

Calf Support

The calf support has 2 use positions.

- 1 - To raise the calf support, lift up. To lower the calf support, press the adjustment button in the middle of the calf support **(22)-1**, and push down. **(22)-2**

Recline

There are 4 recline positions for the backrest.

- 1 - To raise or lower the backrest, squeeze the recline adjustment button, and pull the seat up or down. **(23)**

Insert

The insert can be removed to provide a mesh seating area for better ventilation during hot weather.

- 1 - To remove the insert, release the velcro on insert from the back of the seat, unbuckle the harness, thread the harness through the harness slots and remove the insert. **(24)**

Brake

- 1 - To lock the rear wheels, step down on the brake lever. To unlock the rear wheels, lift up on the brake lever. **(25)**
- ! Always apply the brake when the stroller is stopped. Push the stroller slightly to ensure the brake is engaged.

Custom Dual Suspension™

The stroller has two suspension modes. Make sure there is no weight placed on the stroller when you are adjusting the rear suspension and that both levers are in the same position.

- 1 - Flip the adjustment lever up **(26)-1** when on rough terrain for a softer suspension and flip the adjustment levers down **(26)-2** when on smooth surfaces for a stiffer suspension.

Front Swivel Locks

It is recommended to use the front swivel locks on uneven surfaces.

- 1 - Pull the front swivel lock up to unlock the front wheel. Push the front swivel lock down to lock the front wheel. **(27)**

Storage Basket

- 1 - The front zipper and rear zipper of the storage basket can be opened for easy use. **(28)**
- 2 - Put the durable pad into the storage basket **(29)** and fasten the button. **(30)**

- 3 - Press the release button to open the storage basket. (31)

Fold

Before folding the stroller, adjust the handle to the 3rd highest position and make sure the front swivel locks are unlocked.

The stroller can be folded with the seat facing forward or without the seat.

If folding with the seat, place the seat in the most reclined position for a more compact fold.

- 1 - Fold the canopy and rotate the storage latch out. (32)
- 2 - Press the secondary lock and pull up the folding button. (33)
- 3 - Rotate the handle down and make sure the storage latch is closed on the stroller frame. (34)
- 4 - Fold the calf support down for a more compact fold. (35)

Seating Option Use

- 1 - The stroller frame can be used with a Nuna infant carrier (using included adapters) seat. (36)
- ! **DO NOT** use the stroller frame with infant carrier shown as. (37)

Accessories

! **NOT** all accessories are included on some models.

Infant Carrier Post Adapters

For infant carrier assembly and usage, please refer to the infant carrier instruction manual.

The angle of infant carrier can be adjusted with our adjustable adapters. (38)

- 1 - The post adapters only can be attached rear facing in the mount. (39)
 - 2 - To remove the infant carrier, push the release buttons on the infant carrier (40) and lift up.
 - 3 - To remove the post adapters, lift the post adapters upwards (41)-1 while pulling the release buttons. (41)-2
- ! Remove the infant carrier before folding.

DEMI™ icon Rain Cover

Only use the rain cover on the seat in the upper mount. (42)

- 1 - To assemble the rain cover, place it over the seat.

Cleaning and Maintenance

Clean the frame, plastic parts, and fabric with a damp cloth, but do not use abrasives or bleach. Do not use silicon lubricants as they will attract dirt and grime. Do not store your stroller in a damp place.

Clean the stroller wheels regularly with water and remove any dirt.

To ensure long-lasting use, wipe the stroller off with a soft, absorbent cloth after using it in rainy weather.

Refer to the care label attached to the soft goods for washing and drying instructions.

It is normal for fabric to color from sunlight and to show wear and tear after a long period of use, even when used normally.

For reasons of safety, only use original Nuna parts.

Check regularly if everything functions properly. If any parts are torn, broken, or missing, stop using this product.

