


cuclTM deux



nuna[®]

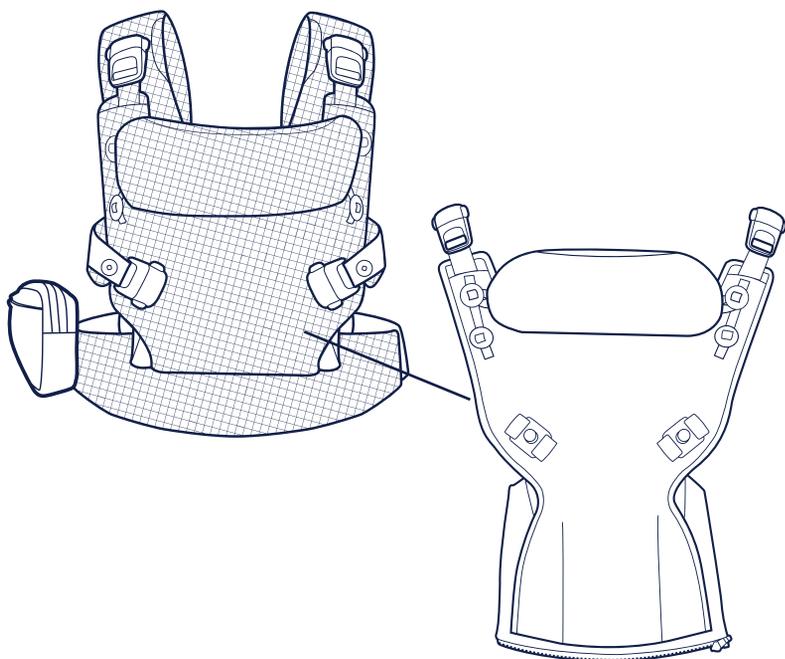

Thank you!

You've just purchased a Nuna product, and you can be sure that your child is getting the best there is. Our products are expertly engineered for safety, with luxury fabrics and sophisticated style. Whatever made you fall in love with Nuna, rest assured your adventures with your little one will be easier from now on, freeing you to enjoy more happy family moments together.



⚠ WARNING
**READ ALL INSTRUCTIONS
CAREFULLY BEFORE ASSEMBLING
AND USING THE SOFT CARRIER.**
*KEEP INSTRUCTIONS
FOR FUTURE USE*

Contents

Product Information	4
Product Registration	
Limited Warranty	
Contact	
Child Usage Requirements	5
Warnings	6
Parts List	8
Product Set Up	10
Ergonomic Child Positioning	11
Product Use	12
Attach Carrier	
Opening Baby Carrier	
Magnetic Buckle Indicators	
Use Winter/Summer Body Support Replacement	
Body Support Height Adjustment	
Head and Neck Support	
Securing Your Child	22
Facing In	
Facing Out	
Back Carry	
Accessories	32
Bib	
Harness Covers	
Sunshade	
Breeze Cover	
Removable Pouch	
Storage Bag	
Cleaning and Maintenance	40

Product Information

Model Number: _____

Manufactured in (date): _____

Product Registration

Please fill in the above information. The model number and the manufactured in date are located on a label on the product. Fill out the prepaid registration postcard attached to the product and mail it today.

To register your product please visit:

www.nunababy.com

Click the “Register Gear” link on the homepage.

Limited Warranty

We have purposely designed our high-quality products so that they can grow with both your child and your family. Because we stand by our product, our gear is covered by a custom limited warranty per product, starting from the day it was purchased. Please have the proof of purchase, model number and manufactured in date available when you contact us.

For warranty information please visit:

www.nunababy.com

Click the “Warranty” link on the homepage.

Contact

For replacement parts, service, or additional warranty questions, please contact our customer service department.

In the USA

infousa@nunababy.com

www.nunababy.com


1.855.NUNA.USA

Child Usage Requirements


Please refer to the chart below for proper usage to ensure the safety of your child. There are four carry modes. Mode usage is determined by your child's weight.

Complies with ASTM F2236

**Facing In/Infant Mode
Upper Zipper**
8–15 lb (3.5–7 kg)
Birth - 4 months

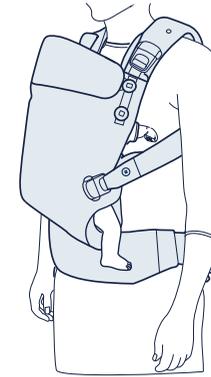


**Facing In
Lower Zipper**
15–30 lb (7–13.5 kg)
4+ months

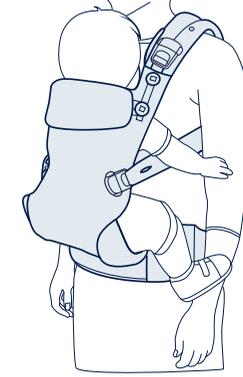

**Facing Out
Lower Zipper**
20–30 lb (9–13.5 kg)
6+ months



**Back Carry
Lower Zipper**
25–35 lb (11–16 kg)
9+ months

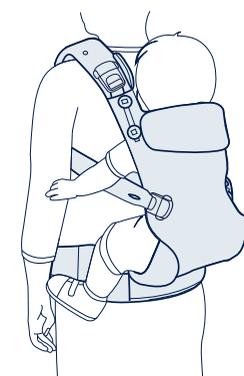

WARNING

FALL AND SUFFOCATION HAZARD

FALL HAZARD - Babies can fall through a wide leg opening or out of carrier. Follow instructions for use.

- Adjust leg openings to fit baby's legs snugly.
- Before each use, make sure all buckles, fasteners, and adjustments are secure.
- Take special care when leaning or walking.
- Never bend at waist; bend at knees.
- Only use this carrier for babies between 8 lb (3.5 kg) and 35 lb (16 kg).

SUFFOCATION HAZARD - Babies under 4 months can suffocate in this product if face is pressed tight against your body.

- Do not strap baby too tight against your body.
- Allow room for head movement.
- Keep baby's face free from obstructions at all times.
- If you nurse your baby in carrier, always reposition after feeding so baby's face is not pressed against your body.

WARNING

Check to ensure all buckles, snaps, straps, and adjustments are secure before each use.

Check for ripped seams, torn straps or fabric and damaged fasteners before each use.

Stop using the carrier if parts are missing or damaged.

Baby must face towards you until he or she can hold head upright.

Ensure proper placement of child in product including leg placement.

Make sure baby's legs are straddling the seat and arms extend through arm holes.

Regularly check that your child is comfortably and securely seated in the baby carrier, especially when using as a back carrier.

To prevent hazards from falling, ensure that your child is securely positioned in the carrier.

Hold your baby closely at all times until correctly attached.

The body support must be attached to the upper zipper if your child weighs 8–15 lb (3.5 kg–7 kg) and should **ONLY** be used with your child facing in.

Premature infants, infants with respiratory problems, and infants under 4 months are at greatest risk of suffocation.

For low birth weight babies and children with medical conditions, seek advice from a health professional before using the product.

When using the soft carrier, monitor your child.

Be aware of hazards in the domestic environment e.g. heat sources, spilling of hot drinks.

Take care when bending or leaning forward or sideways.

Your balance may be adversely affected by your movement and that of your child.

This baby carrier is designed for use by adults while walking, standing or sitting only.

This baby carrier is not suitable for use during sporting activities.

DO NOT use this soft carrier if you use a pacemaker, as the magnetic buckles can interfere with the pacemaker.

NEVER use a soft carrier when balance or mobility is impaired because of exercise, drowsiness, or medical conditions.

NEVER use a soft carrier while engaging in activities such as cooking and cleaning which involve a heat source or exposure to chemicals.

NEVER wear a soft carrier while driving or being a passenger in a motor vehicle.

NEVER lie down or sleep with baby in the baby carrier.


Parts List

Make sure all parts are available before assembly. If any part is missing, please contact Nuna. No tools are required for assembly.

- 1 Side Buckle
- 2 Leg Hole Adjustment Button
- 3 Carrier Harness
- 4 Shoulder Strap
- 5 Yoke
- 6 Sunshade Snaps
- 7 Shoulder Adjustment Strap
- 8 Waist Band Adjuster
- 9 Waist Band
- 10 Waist Band Buckle

Removable Parts

- 11 Bib (x2)
- 12 Harness Covers
- 13 Shoulder Buckle
- 14 Shoulder Buckle Adjustment
- 15 Head and Neck Support Button
- 16 Sunshade Pocket
- 17 Head and Neck Support
- 18 Summer Body Support
- 19 Winter Body Support
- 20 Storage Bag
- 21 Removable Pouch
- 22 Breeze Cover

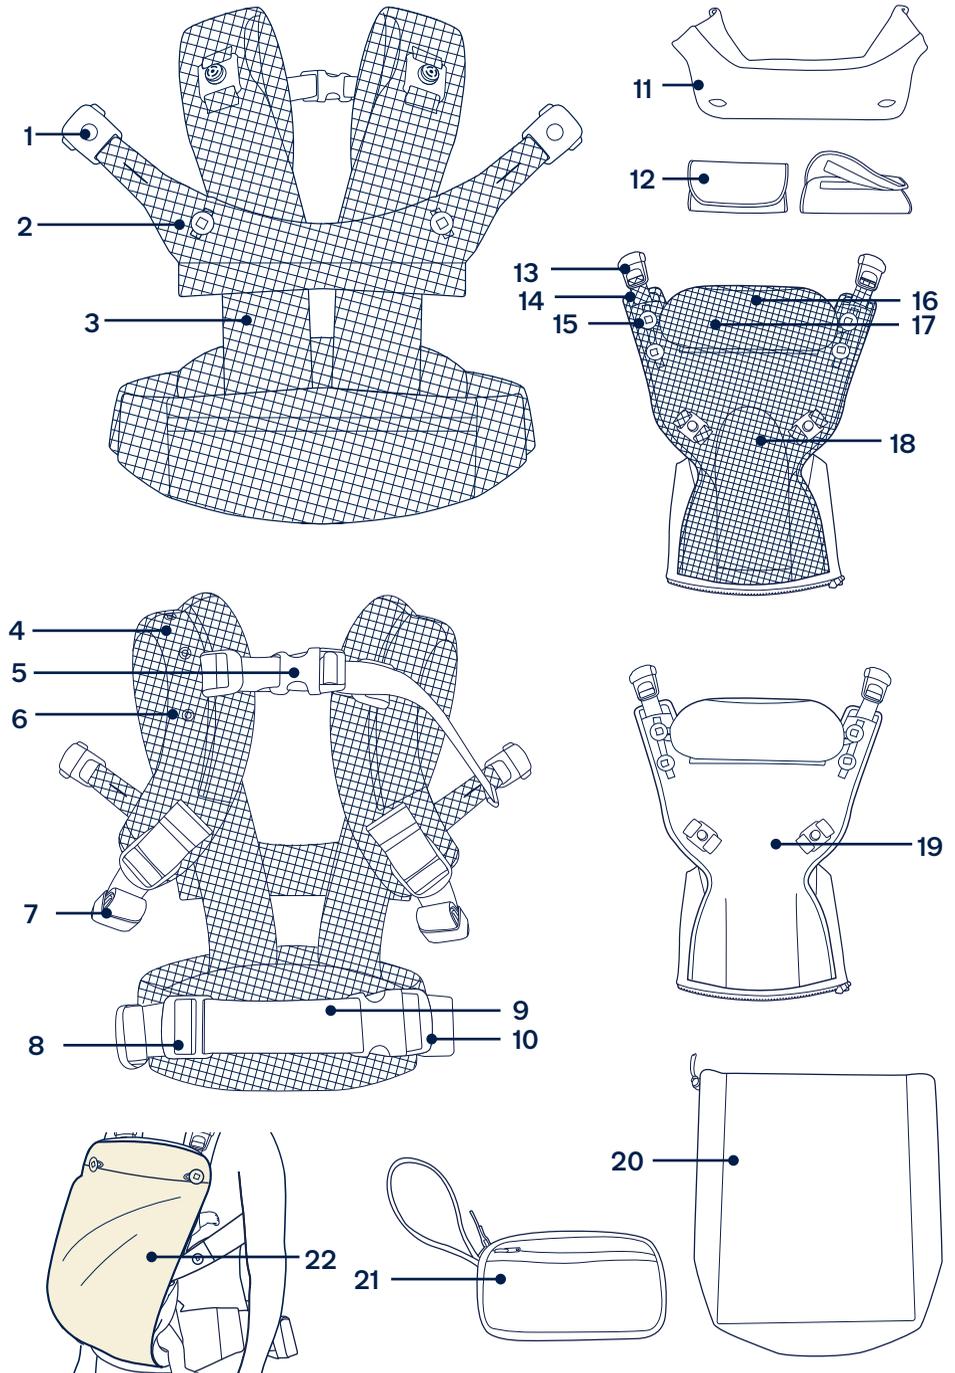


Product Set Up


Based on the chart below, position the head support according to your baby's weight.

- ⚠ Your baby's head should be supported until he or she has strong head control (approximately 4 months of age).

Facing In/Infant Mode
Upper Zipper
 8-15 lb (3.5-7 kg)
 Birth - 4 months

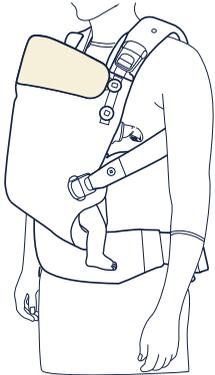

Facing In
Lower Zipper
 15-30 lb (7-13.5 kg)
 4+ months

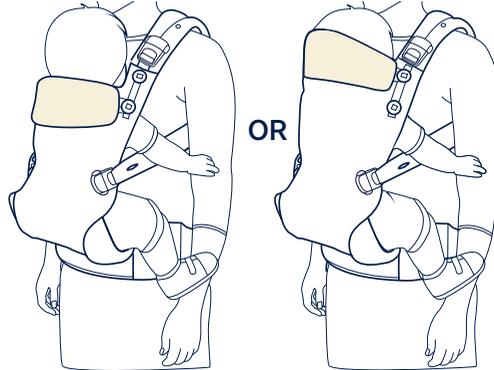

Facing Out
Lower Zipper
 20-30 lb (9-13.5 kg)
 6+ months




Back Carry
Lower Zipper
 25-35 lb (11-16 kg)
 9+ months



Ergonomic Child Positioning


Hip-Healthy

For hip-healthy babywearing, baby's thighs should be supported from the hip to the knee joint. This ergonomic "M" shape seating reduces forces on the hip joint. Never force baby's legs into a position that is not easily achieved.

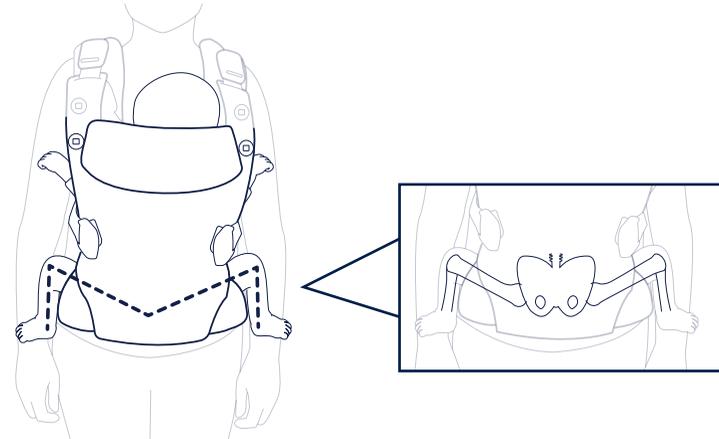

Spine-Healthy






For spine-healthy babywearing, proper support is needed. The baby's spine should be allowed to naturally form a "C" shape. Never force baby into a position that is not easily achieved.

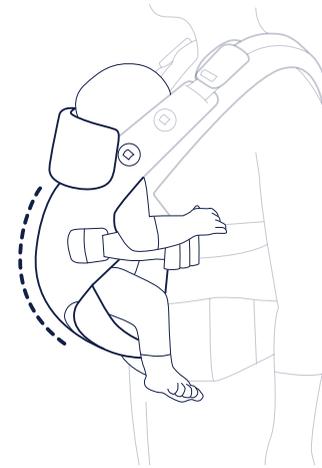

Product Use

Attach Carrier

- 1 - Open the waist band.
- 2 - Make sure both the shoulder buckles and the side buckles are connected (circled in green)
- 3 - Holding the carrier in front of you, slide your arms through the shoulder straps.
- 4 - Pull the carrier over your head
- 5 - Make sure the yoke is connected (circled in blue). Adjust the height and width of the yoke vertically and sideways to achieve a comfortable fit. The yoke should rest between your shoulder blades.
- 6 - Secure the waist band behind your back, engaging the waist buckle to hold the band firmly in place.

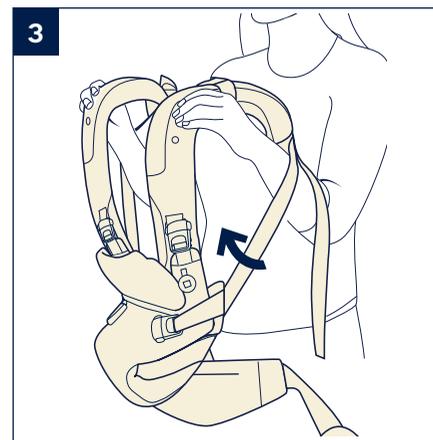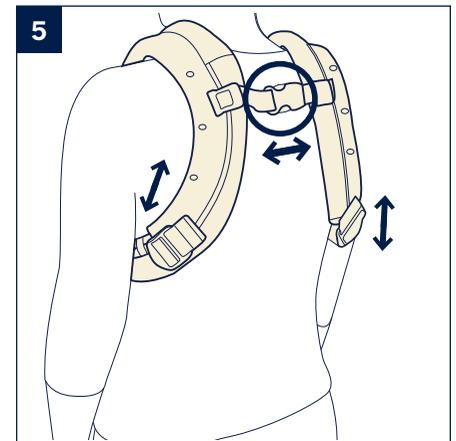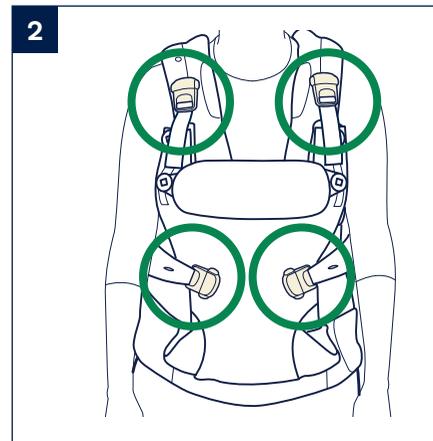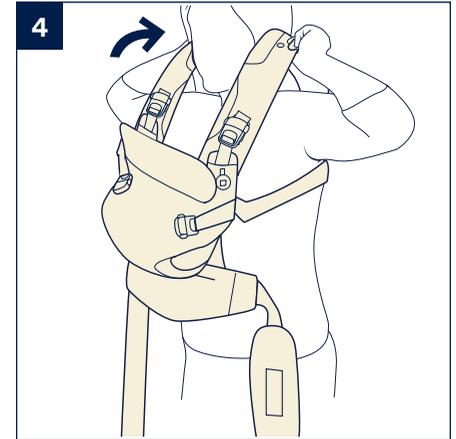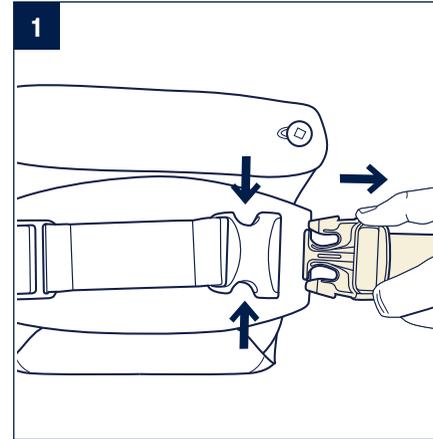

Product Use (continued)

- 1 - To adjust the waist band, pull on the webbing to tighten, or pull on the waist band adjuster to loosen.

To remove the carrier, reverse the steps above.







⚠ DO NOT remove the carrier while your child is in it.

Opening Baby Carrier

- 2 - Release both shoulder buckles.
3 - Release both side buckles.
4 - The carrier is open.
5 - If your child weighs more than 15 lb (7 kg), the leg hole adjustments are not needed. **Slide the leg hole adjustment button out of the button hole on the shoulder strap near the side buckle.**
⚠ Leg hole adjustments **MUST** be used for children less than 15 lb (7 kg) to decrease the size of the leg hole and prevent sliding without pinching or chafing your child's leg.

Magnetic Buckle Indicators

- 6 - When following the steps for securing your child, secure all four magnetic buckles by attaching them where you see the Buckle indicators (●). The buckle must click into place on the raised indicator area.

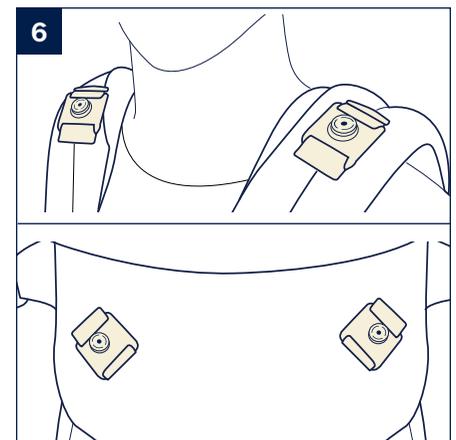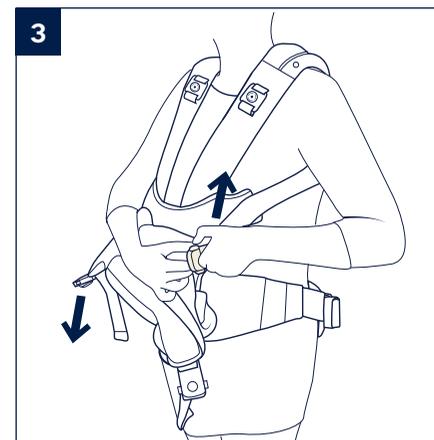
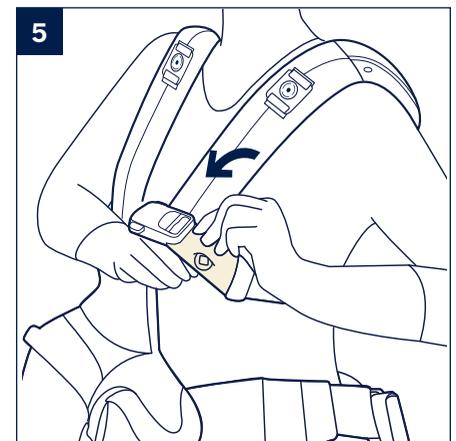
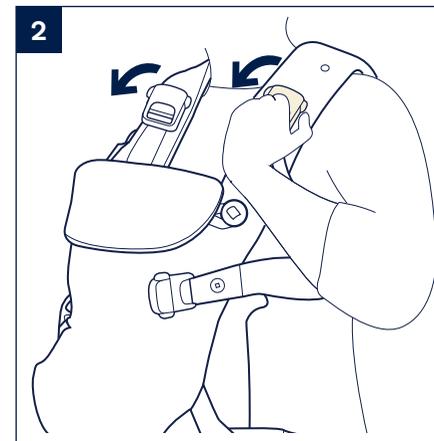
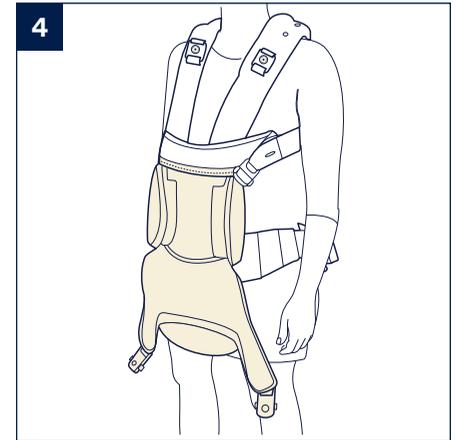
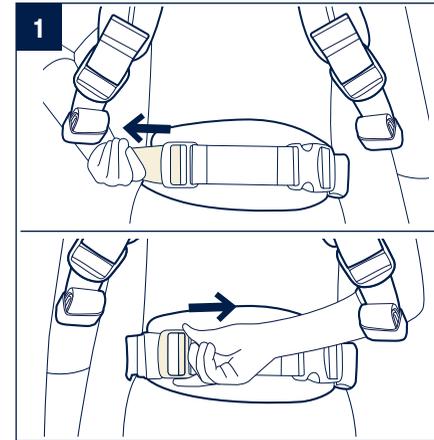


Product Use (continued)

Use Winter/Summer Body Support Replacement

CUDL deux comes with two body support options. Summer body support comes attached and winter body support comes separate.


- 1 - To switch body support, release both shoulder buckles and unwrap body support (if stored).
- 2 - Unzip the zipper to remove the body support in use.
- 3 - Zip body support to desired zipper position.
 - a **Upper Zipper (Infant Mode)**
Facing In ONLY (p.22)
8–15 lb (3.5–7 kg) and from Birth - 4 months
 - b **Lower Zipper**
Facing in 15–30 lb (7–13.5 kg) and 4+ months (p.22)
Facing Out 20–30 lb (9–13.5 kg) and 6+ months (p.26)
Back Carry 25–35 lb (11–16 kg) and 9+ months (p.28)
- 4 - If your child weighs more than 15 lb (7 kg), the leg hole adjustments are not needed. **Slide the leg hole adjustment button out of the button hole on the shoulder strap near the side buckle.**
 - ⚠ Leg hole adjustments **MUST** be used for children less than 15 lb (7 kg) to decrease the size of the leg hole and prevent sliding without pinching or chafing your child's leg.
- 5 - Fasten both the shoulder buckles and the side buckles (circled in green).

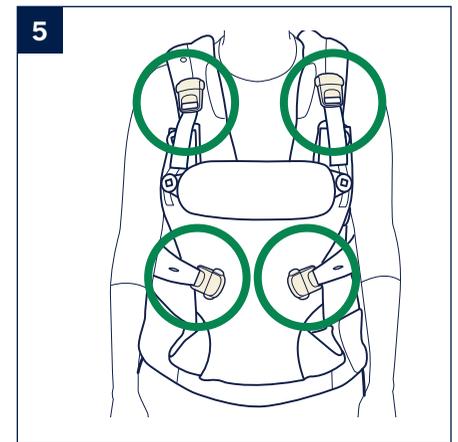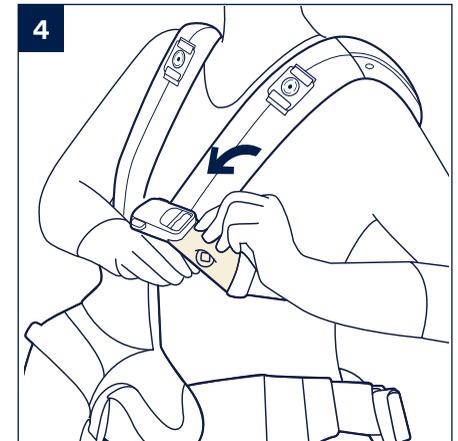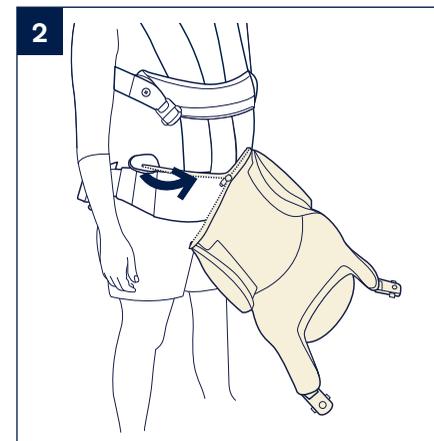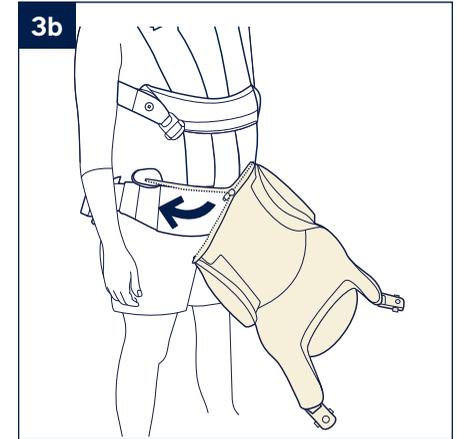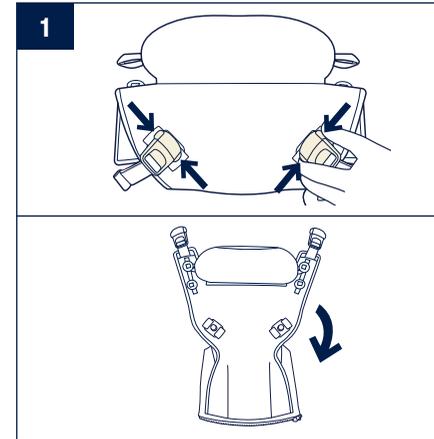

Product Use (continued)

Body Support Height Adjustment




- 1 - The body support must be attached to the upper zipper if your child weighs less than 15 lb (7 kg).
- 2 - When your baby is over 15 lb (7 kg), the body support can be attached to the lower zipper.

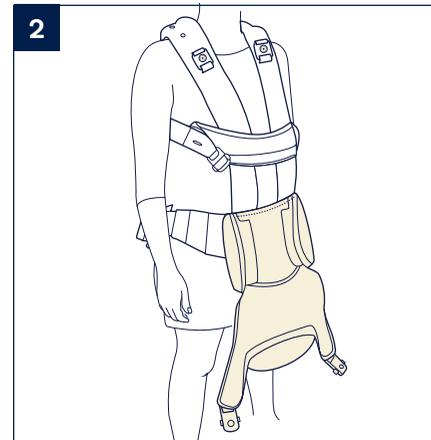

Product Use (continued)

Head and Neck Support

- 1 - For a child weighing 8–15 lb (3.5–7 kg), secure the head and neck support so that it is up and supporting the child's head and neck area. Attach the head and neck support to the upper head and neck support buttons. Only fold the head and neck support down when the child is able to hold his or her head up (approx. 4 months).
- 2 - To fold down, slide both upper head and neck support buttons out of the button holes on the head and neck support.
- 3 - Fold the head and neck support down.
- 4 - Attach both bottom head and neck support buttons into the button holes on the head and neck support.
- 5 - Make sure your child is comfortable and securely seated in the baby carrier. Adjust the straps around your child and check to make sure all buckles and snaps are secure. Allow room for your child's head movements and keep child's face free from obstructions.

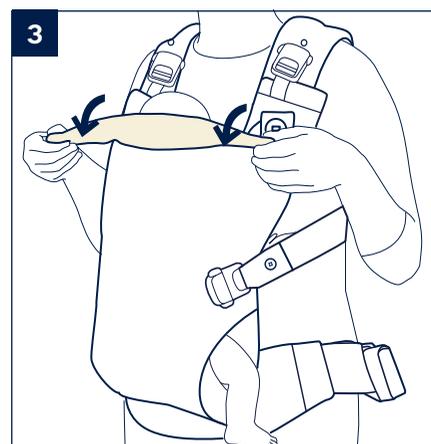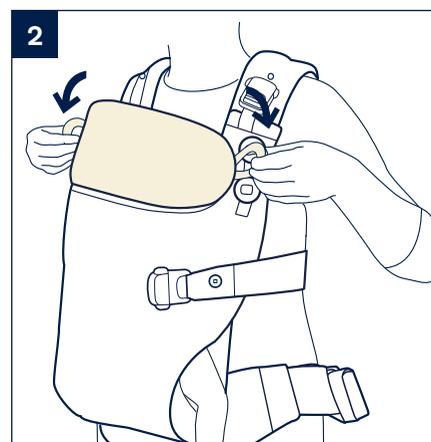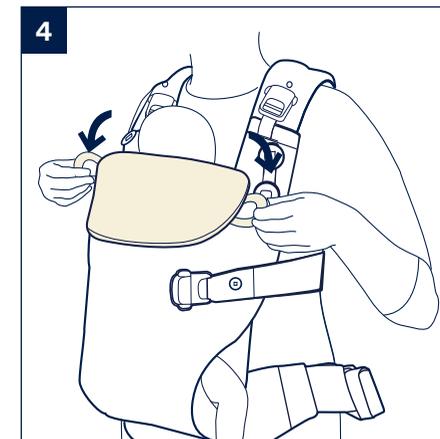

Securing Your Child

Facing In

▲ We recommend sitting down while securing your child in the carrier, as it provides better control.

1 - Begin with the carrier fully open with body support in correct zipper position.

a **Upper Zipper (Infant Mode)**

Facing In ONLY

8–15 lb (3.5–7 kg) and from Birth - 4 months

b **Lower Zipper**

Facing in 15–30 lb (7–13.5 kg) and 4+ months





2 - Attach one side buckle where you see the Buckle indicator (●).

3 - Hold your child securely against your chest with one hand, and use the other to raise the front of the carrier. Guide your child's leg down and through the opening between the seat and the attached side buckle.

Upper Zipper (Infant Mode)
8–15 lb (3.5–7 kg)
Birth - 4 months







Lower Zipper
15–30 lb (7–13.5 kg)
4+ months

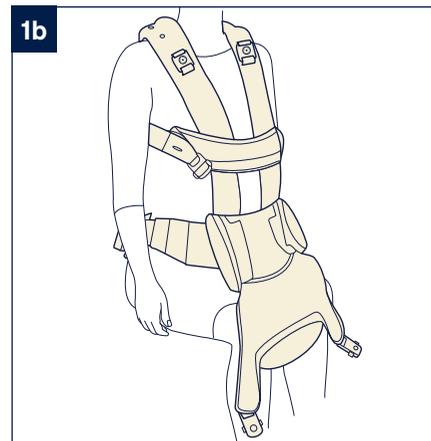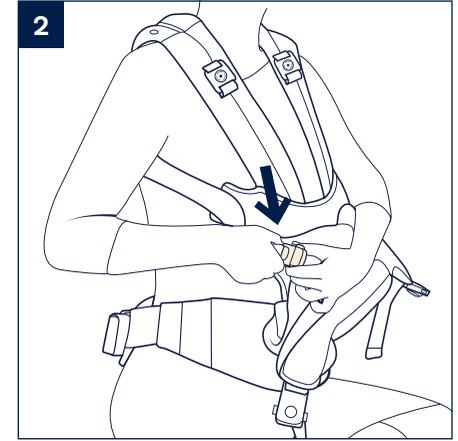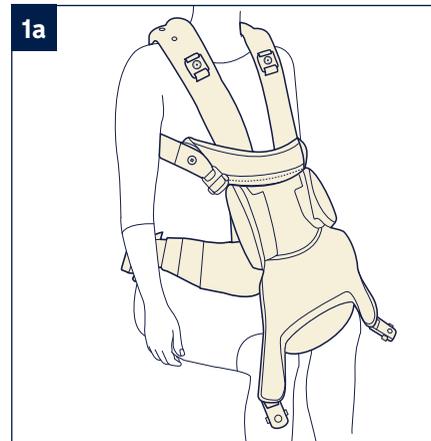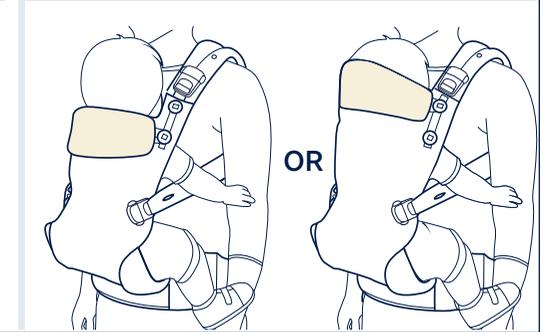

Securing Your Child (continued)


- 1 - Use one hand to hold the carrier and your child against you, and use the other to secure the other side buckle where you see the Buckle indicator (●).
- 2 - Holding your child in the carrier with one hand, secure the shoulder buckles one at a time where you see the Buckle indicators (●).
- 3 - Gently pull both shoulder buckle adjustments down to adjust the fit.
- 4 - Adjust the shoulder straps by gently pulling both shoulder adjustment straps evenly out in front of you.
- 5 - Once standing, confirm your child's legs are properly positioned outside of the leg openings. Make sure your child is comfortable and securely seated in the baby carrier. Adjust the straps around your child and check to make sure all buckles and snaps are secure. Allow room for your child's head movements and keep child's face free from obstructions.
 - ⚠ Your child should be positioned close to you, high on your body.
 - ⚠ Keep your child's face visible to you at all times.

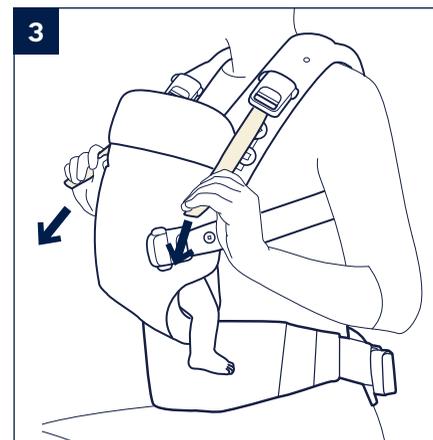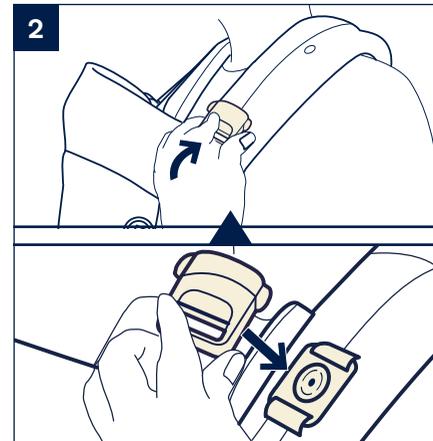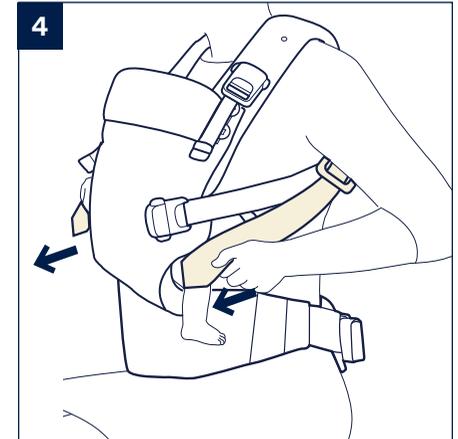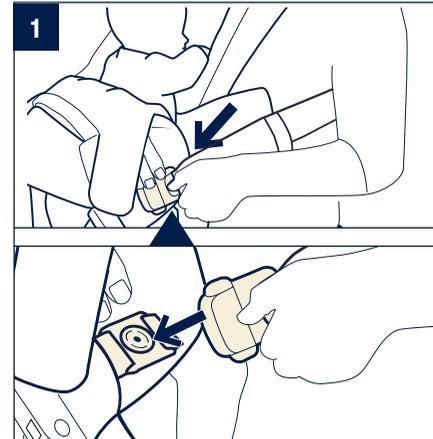

Securing Your Child (continued)

Facing Out






- ⚠ If body support is in upper zipper (infant mode) position, move to lower zipper position (**p. 18**).
- 1 - Fold the head support down so your child's face will be above the top edge of the carrier. The carrier is now ready for you to secure your child.
Follow the same steps for securement as Facing In mode (**p. 22**), but face your child outward.

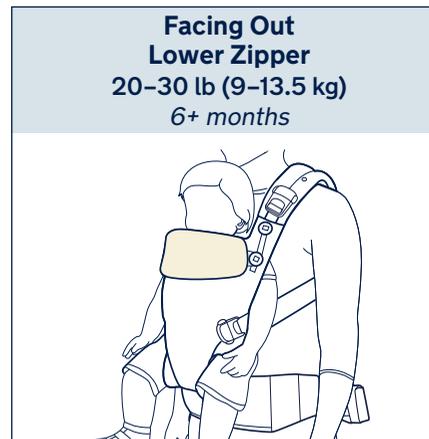

Securing Your Child (continued)







Back Carry

- ⚠ If body support is in upper zipper (infant mode) position, move to lower zipper position (**p. 18**).
 - ⚠ We recommend practicing this method a few times without a child in the carrier before attempting it with your child.
 - ⚠ Child should **NEVER** be facing out (away from you) in back carry mode.
- 1 - With your child in the baby carrier facing inward, loosen both shoulder adjustment straps (**DO NOT unbuckle**).
 - 2 - Slide your right arm out of the right shoulder strap while cradling your child with your left arm.
 - 3 - Slide your left arm under the shoulder adjustment strap on the side while cradling your child with your right arm.
 - 4 - Cradling your child with your right arm, guide your child to your right hip using your left arm.
 - 5 - Still supporting your child, grab the shoulder strap with your left hand and pull it down over your shoulder.

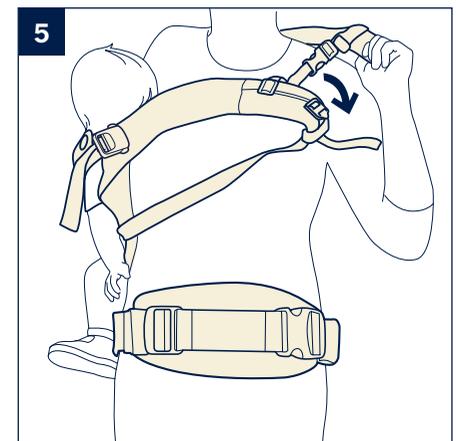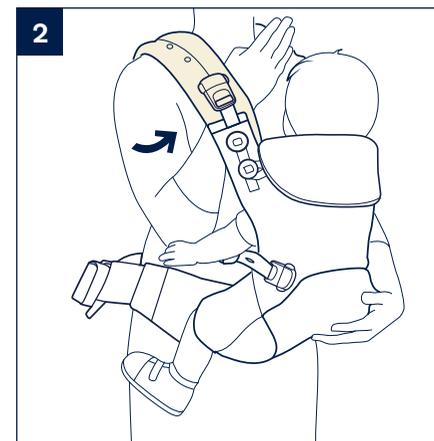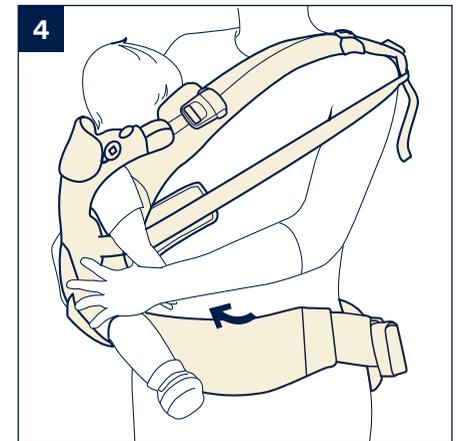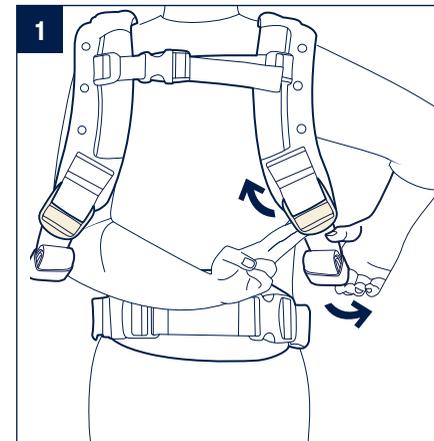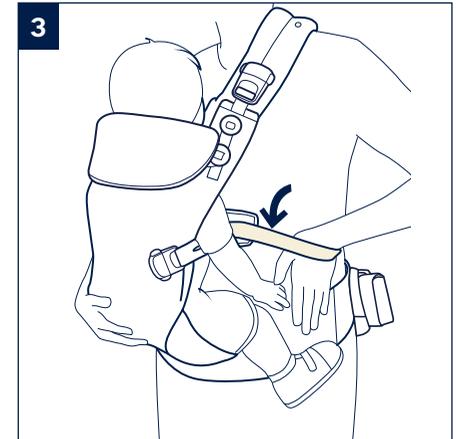

Securing Your Child (continued)





- 1 - Slightly lean forward and move your child onto your back.
- 2 - Slide your left arm up through the shoulder adjustment strap on the side while cradling your child behind your back with your right arm.
- 3 - Slide your right arm down through the shoulder strap while cradling your child with your left arm. Both shoulder straps should now be secure around your shoulders.
- 4 - Pull down on the shoulder adjustment straps to tighten. Adjust the yoke up or down vertically and side to side.
- 5 - Roll up the excess length of the shoulder adjustment straps and use the elastic loop to wrap around the rolled up strap to store it out of the way.
- 6 - Make sure your child is comfortable and securely seated in the baby carrier. Adjust the straps around your child and check to make sure all buckles and snaps are secure. Allow room for your child's head movements and keep child's face free from obstructions.

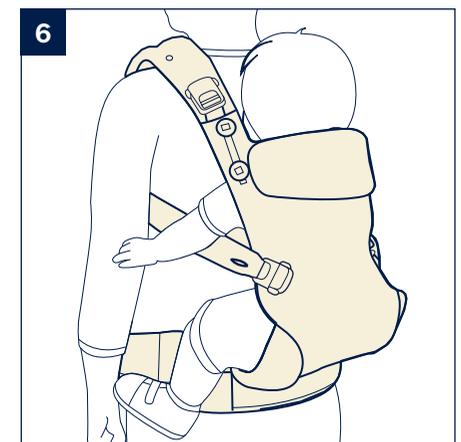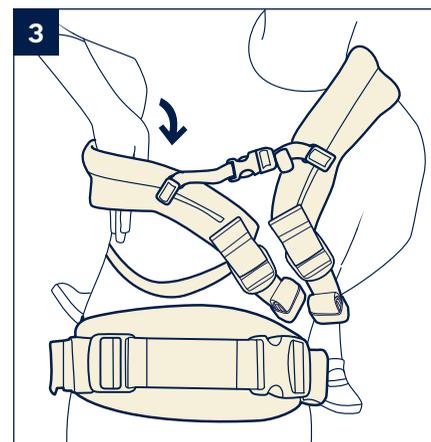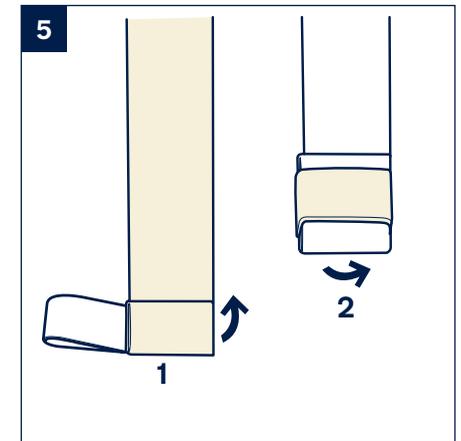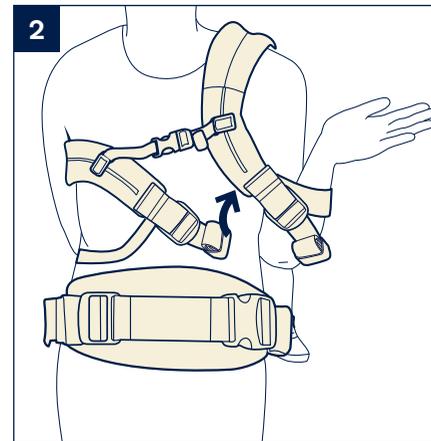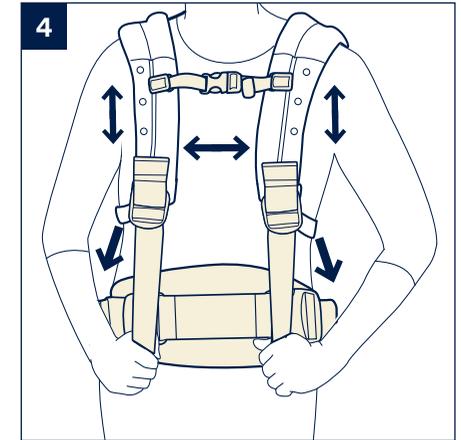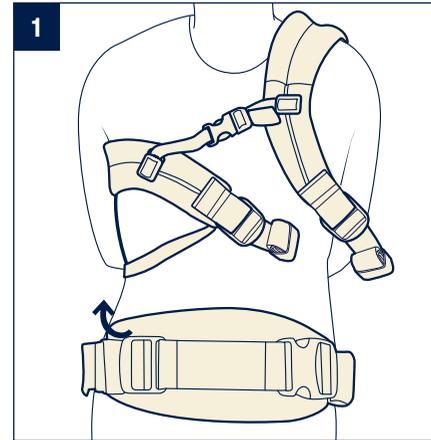

Accessories

Bib







- 1 - Make sure the head support is folded down and secured in place with the lower head support buttons.
- 2 - Store the extra length of the shoulder buckle adjustment in the pocket on the shoulder buckle strap.
- 3 - Cover the front of the head support with the front of the bib and slide both head support buttons through the button holes on the bib.
- 4 - Fold and tuck the bib over the top edge of the head support.
- 5 - Wrap both side edges of the bib around the shoulder buckle strap. The back edge of the bib is slid between the shoulder strap and shoulder buckle strap. The front edge of the bib is laid over the shoulder buckle strap.
- 6 - Attach the sides of the hook and loop. Make sure the bib is laying flat and is secure to the top edge of baby carrier.

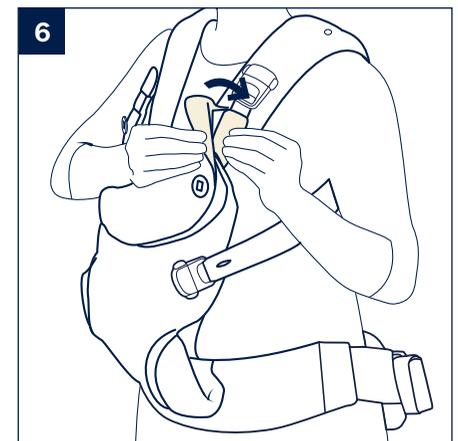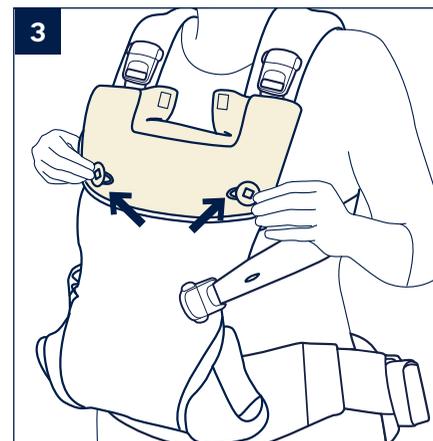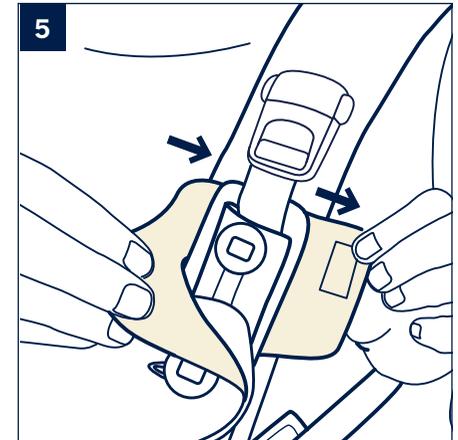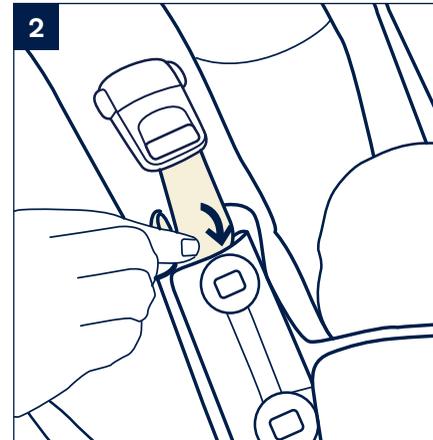

Accessories (continued)

Harness Covers




- 1 - Unbutton the head support and fold it down.
- 2 - Store the extra length of the shoulder buckle adjustment in the pocket on the shoulder buckle strap.
- 3 - Slide the harness cover between the shoulder strap and the shoulder buckle strap.
- 4 - Slide the button on the shoulder buckle strap through the button hole on the harness cover.
- 5 - Attach the hook and loop. Make sure the bottom edge of the harness cover is tucked behind the head support.
- 6 - Repeat on the other side. When both harness covers are secure, attach both bottom head support buttons into the button holes on the head support.

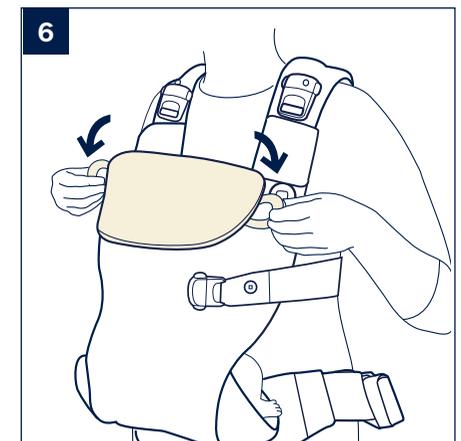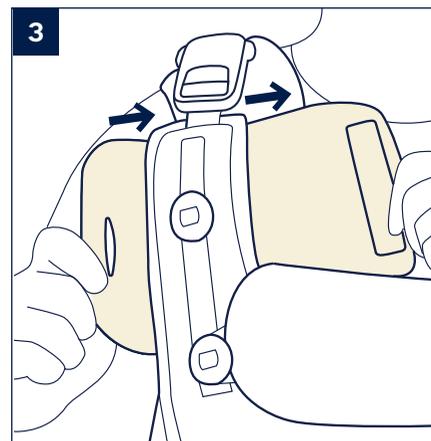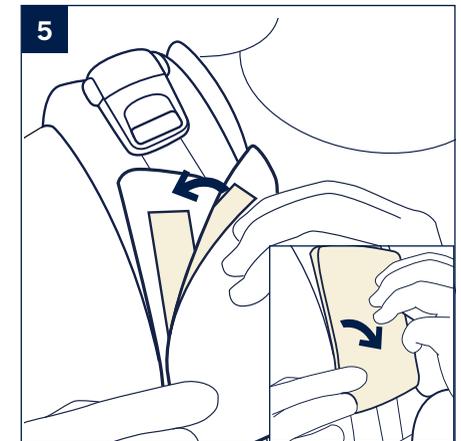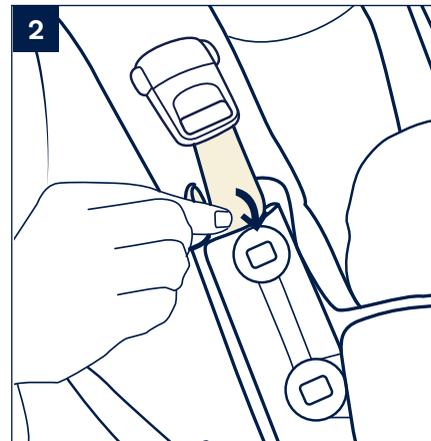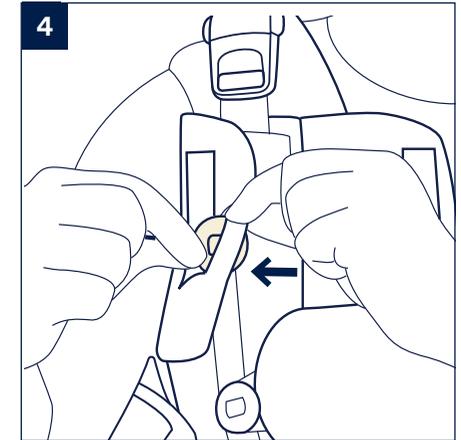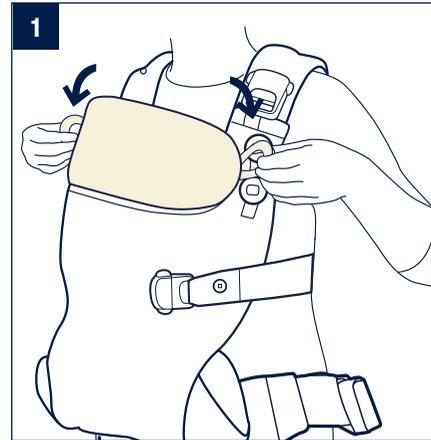

Accessories (continued)

Sunshade

- 1- Make sure the head support is up and secured in place with the upper head support buttons. Undo the snap on the pocket located on the top edge of the head support.
 - 2- Pull the sunshade out of the sunshade pocket.
 - 3- Adjust the sunshade to the desired position to shade your child.
 - 4- Attach three snaps on the sunshade strap to the three snaps on the shoulder strap. Repeat for the other side.
- ⚠ Make sure the hood is not covering your child's mouth or laying too tightly over their head.

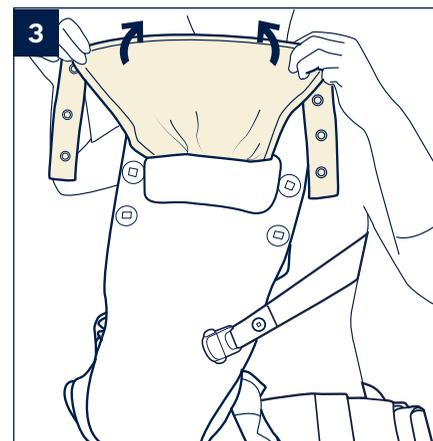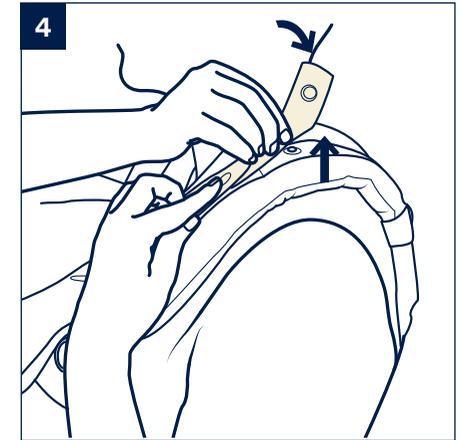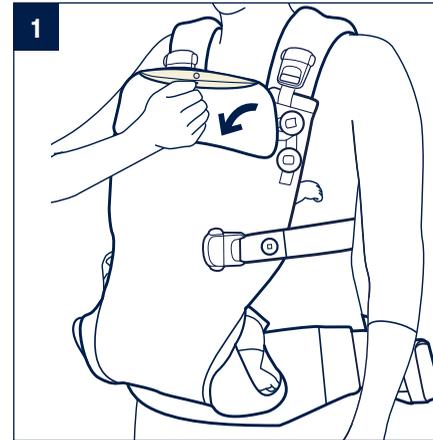

Accessories (continued)

Breeze Cover

⚠ DO NOT use without body support.

1 - Unroll breeze cover from pocket at the bottom of the carrier when needed.


2 - Attach breeze cover by fastening to head support button.

Removable Pouch

3 - Removable pouch can be slid onto waist band or used separately.

Storage Bag

4 - CUDL deux can be stored in storage bag.

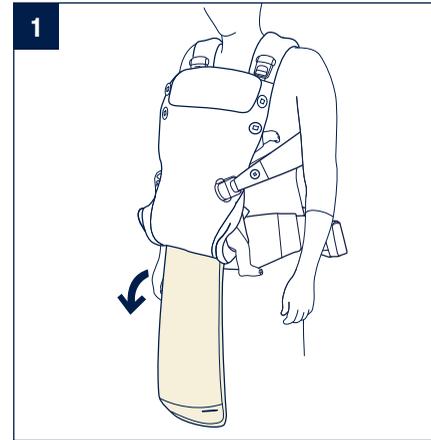

Cleaning and Maintenance

Refer to the care label attached to the carrier fabric for washing and drying instructions. Carrier **MUST** be washed inside a mesh laundry bag.

It is normal for fabric to fade from sunlight and to show wear and tear after a long period of use, even when used normally.

For safety reasons, only use original Nuna parts.

Check regularly that everything functions properly. If any parts are torn, broken, or missing, stop using this product.

IM-001619E



Nuna Baby Essentials, Inc.

70 Thousand Oaks Blvd. | Morgantown, PA 19543

1.855.NUNA.USA | nunababy.com