


pipa™ series base

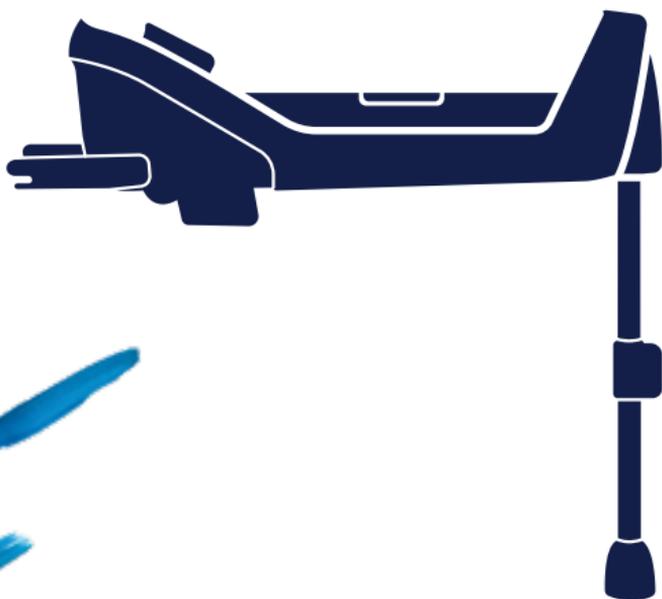

nuna®

Thank you!

You've just purchased a Nuna product, and you can be sure that your child is getting the best there is. Our products are expertly engineered for safety, with luxury fabrics and sophisticated style.

Whatever made you fall in love with Nuna, rest assured your adventures with your little one will be easier from now on, freeing you to enjoy more happy family moments together.

Easy Installation

Our products are designed to make your life easier, so installing this child restraint doesn't require outside assistance. While we encourage the use of Certified Child Passenger Safety Technicians to ensure you have installed the seat correctly, you can install the child restraint in your vehicle without these professionals by carefully reading and following these instructions.



**IMPORTANT!
KEEP THESE
INSTRUCTIONS
FOR FUTURE
REFERENCE:
*READ CAREFULLY***

Contents

Product Information	
Product Registration	4
Recall Information	4
Limited Warranty	5
Contact	5
Child Usage Requirements	6
Car Seat Compatibility	6
Warnings	7
Car Seat & Base Use after a Crash	9
Vehicle Compatibility	10
Base Parts List	14
Installation	16
Cleaning and Maintenance	30

Product Information

Model Number: _____

Manufactured in (date): _____

Product Registration

Please fill in the above information. The model number and the manufactured in date are located on a label on the base. Fill out the prepaid registration postcard attached to the seat pad and mail it today.

Child restraints could be recalled for safety reasons. Register your child restraint so you can be notified in case of a recall. Send your name, address, e-mail/phone number if available and the restraint's model number and manufacturing date to:

Nuna Baby Essentials Inc.
70 Thousand Oaks Blvd.
Morgantown, PA 19543
or call 1.855.NUNA.USA

Recall Information

For recall information, call the U.S. Government's Vehicle Safety Hotline at: 1.888.327.4236 (TTY: 1.800.424.9153) or go to <http://www.NHTSA.gov>

Limited Warranty

We have purposely designed our high-quality products so that they can grow with both your child and your family. Because we stand by our product, our gear is covered by a custom limited warranty per product, starting from the day it was purchased. Please have the proof of purchase, model number and manufactured in date available when you contact us.

For warranty information please visit:
www.nunababy.com/warranty

Contact

For replacement parts, service, or additional warranty questions, please contact our customer service department.

In the USA:
infousa@nunababy.com
www.nunababy.com
1.855.NUNA.USA

Child Usage Requirements

This base is suitable for use with children who meet the following requirements:

Weight: 4–30 lb (1.8–13.6 kg)

Height: 16–30 inches (41–76 cm)

It is recommended to keep your child rear facing as long as possible, until at least 2 years old.

Car Seat Compatibility

This base is compatible with all USA PIPA series infant car seats **except** the PIPA urbn. You **MUST** follow all warnings and instructions provided with the original PIPA series infant car seat. Never attempt to use another manufacturer's seat on this base.

⚠️WARNING

DEATH OR SERIOUS INJURY can occur if you fail to follow the warnings, instructions and labels on the child restraint.

A child's safety is your responsibility. **NEVER** leave your child unattended.

Read all instructions before use of this base or installation in a vehicle. In addition, read the vehicle owner's manual for information on child restraint installation.

Secure this base with the vehicle's child restraint anchorage system if available, or with a vehicle belt.

Use only with children who weigh between 4 and 30 pounds (1.8 and 13.6 kg) and whose height is between 16 and 30 inches (41 and 76 cm). Exceeding these height and weight limits is unsafe.

NEVER use a car seat or base that has been involved in a moderate to severe crash.

See page 9 to learn what is classified as a moderate to severe crash.

EXPIRATION DATE Check the label on the underside of the base or child restraint for expiration date information.

(continued on the next page)

ALWAYS check child restraint to base connection.

DO NOT allow anyone who has not read the instruction manual to install or use this base.

DO NOT allow child restraint or handle to contact the vehicle interior (side of car door or seat in front) when installed on base.

DO NOT use base if it is damaged in any way. To find out if damaged parts are replaceable, call 1-855-NUNA-USA.

NEVER modify any part of the base.

DO NOT use any products or accessories with this base unless they are approved by Nuna for use with this base. Doing so may be unsafe and may void the warranty.

NEVER leave base in vehicle when uninstalled, even when unoccupied. In a crash, it could become a projectile and injure other vehicle occupants.

Car Seat & Base Use after a Crash

The National Highway Traffic Safety Administration (NHTSA) recommends that car seats be replaced following a moderate or severe crash. Car seats do not automatically need to be replaced following a minor crash.

What defines a minor crash?

A minor crash is one in which **ALL** of the following apply:

- The vehicle was able to be driven away from the crash site.
- The vehicle door nearest the car seat was not damaged.
- None of the passengers in the vehicle sustained any injuries in the crash.
- If the vehicle has air bags, none of the air bags deployed during the crash; and
- There is no visible damage to the car seat.

NEVER use a car seat that has been involved in a moderate to severe crash. Contact Nuna with questions or concerns about your seat.

Information from nhtsa.gov

Vehicle Compatibility

You **MUST** read and understand **ALL** child restraint related instructions and warnings in your vehicle owner's manual to correctly and safely use this child restraint in your vehicle.

This child restraint can **ONLY** be installed on vehicle seats that face forward and **MUST** be installed in a vehicle with the base. **DO NOT** install in seats that face to the sides or rear of the vehicle.



NEVER install this child restraint rear facing in a vehicle seating position with a frontal air bag unless it is turned off. Airbags inflate with great force and can cause severe injury to a child's neck and spine. If your vehicle is equipped with passenger side air bags, check your vehicle owner's manual for child restraint installation instructions.

According to accident statistics, children are safer when properly restrained in the rear seating positions than in the front seating positions.

This child restraint was designed for use in an automobile **ONLY**. **DO NOT** attempt to use it on any other type of vehicle.

(continued on the next page)

Refer to your vehicle owner's manual to determine if the belts in your vehicle lock by switching the seat belt's retractor **OR** if they have a locking latch plate that locks the vehicle's seat belt so they will hold the child restraint tightly without loosening.

The following vehicle belts **CAN NOT BE USED** with your child restraint:

1 - Motorized Belts (Automatic)

These should not be used unless the shoulder belt can be removed, the lap belt is locked and use is allowed by the vehicle manufacturer.

2 - Dual Retractor Lap/Shoulder Belts

If allowed by the manufacturer, the lap belt only may be used to secure the child restraint in accordance with this manual and the vehicle's manual.

3 - Non-Locking (ELR) Lap Belts

This belt locks in a crash or sudden stop and should only be used with a belt shortening clip. Contact your vehicle manufacturer if needed.

4 - Airbag/Inflatable Belts







This belt can not be used to install this child restraint.

5 - Door Mounted Belts

This belt can not be used to install this child restraint.

6 - Lap Belts forward of Seat Bight



This belt (where the seat bottom and back meet) should not be used to install this child restraint.

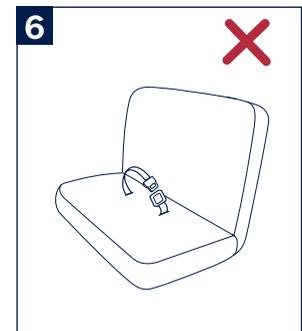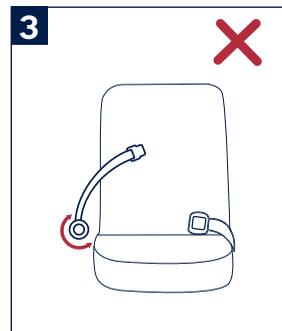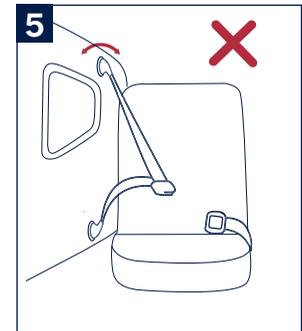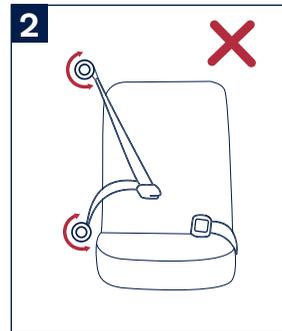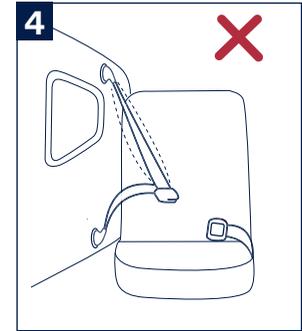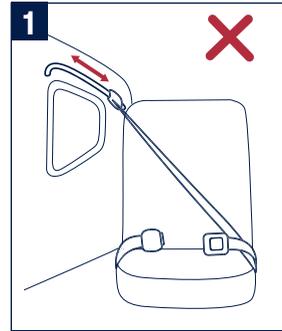

Base Parts List

Make sure all parts are available before assembly. If any part is missing, please contact Nuna (see page 5 for information). No tools are required for assembly.

- 1 Vehicle Belt Lock Off
- 2 Rigid Latch (lower anchors)
- 3 Primary Rigid Latch Release Button
- 4 Secondary Rigid Latch Release Button
- 5 Rigid Latch Guides
- 6 Locking Clip
- 7 Stability Leg
- 8 Level Indicator
- 9 Carrier Release Button
- 10 Stability Leg Adjustment Button
- 11 Stability Leg Indicator
- 12 Instruction Manual Storage
- 13 Stability Leg Storage
- 14 Recline Adjustment



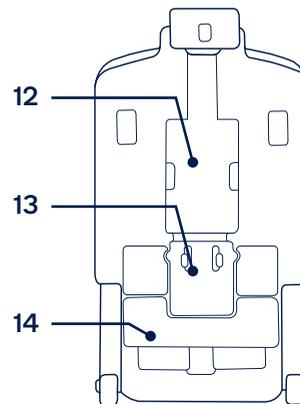
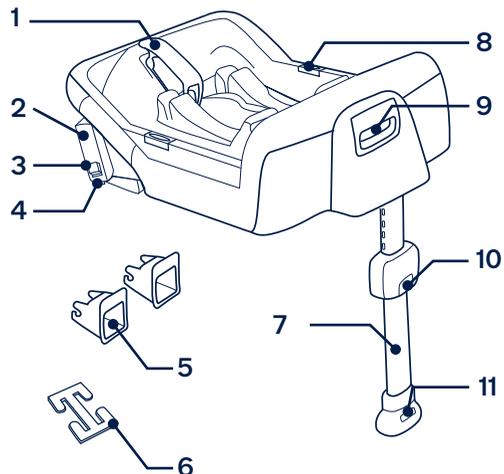


Installation

! If child is not secured properly, child could be ejected in a sudden stop or crash, resulting in serious injury or death.

Base Installation Using Rigid Latch (Lower Anchors)

- 1 - Place vehicle in park and on level ground.
- 2 - Position base in a forward facing vehicle seat. Adjust base so bubble touches line.
- 3 - If necessary, use recline adjustment to position bubble in level indicator to achieve correct angle for installation. Recline adjustment locks into position.
- 4 - To release recline adjustment, press down on lock button located under base.
- 5 - If necessary, install rigid latch guides on vehicle  LATCH lower anchor bars.

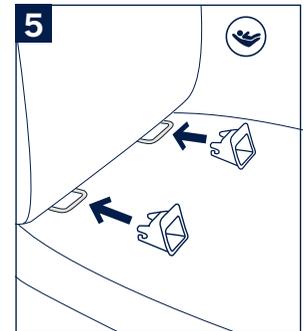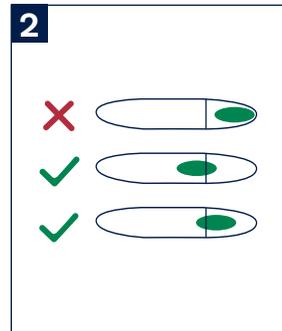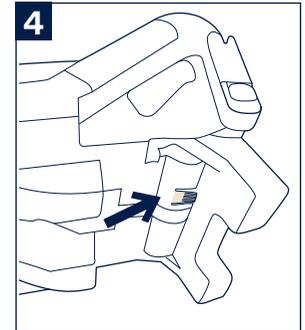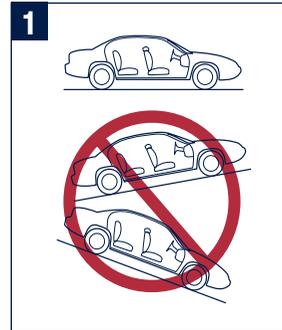

- 1 - Rotate rigid latch (lower anchors) down.
- 2 - Hook rigid latch onto vehicle latch lower anchor bars.
- 3 - Confirm proper installation by pulling on the base **AND** also seeing that green is indicated on the connectors.




⚠ The rigid latch (lower anchors) must be attached and locked onto the vehicle anchor bars.

Additional stability can be achieved with the base by using the stability leg. For instructions on using the stability leg, see stability leg section.

Check the Installation

- Base should not move side to side or forward more than 1" at belt path.
- Bubble must be touching line. Use recline adjustment, if needed, to position bubble.

It is acceptable to install with both latch (lower anchors) and the vehicle belt.

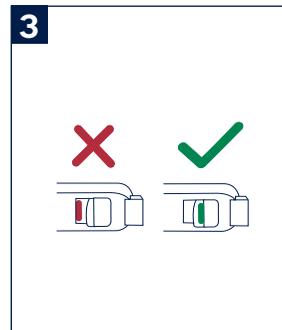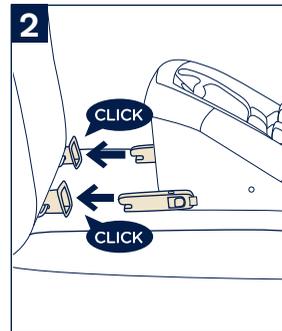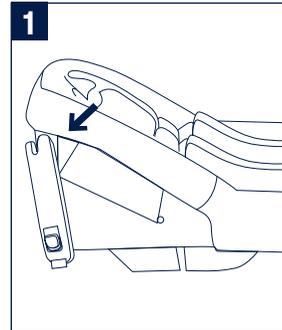

Attaching Child Restraint to Base

1 - After child is properly secured in child restraint, press child restraint on base and listen for a click. Pull on child restraint to verify installation.

⚠ DO NOT allow child restraint or handle to contact the vehicle interior (side of car door or seat in front) when installed on base.

Releasing Child Restraint from Base



2 - To release the child restraint, squeeze the carrier release button **(1)** located on the base and then pull the child restraint up **(2)**.

Uninstalling Base (when Installed with Lower Anchors)

3 - To remove the base, first push the base toward the vehicle seat with a light force.






4 - As you push the base toward the vehicle seat, squeeze the secondary **(1)** and primary rigid latch release buttons **(2)**. For ease of release, push the secondary button first, then the primary button.

5 - Then pull the base off of the bars.

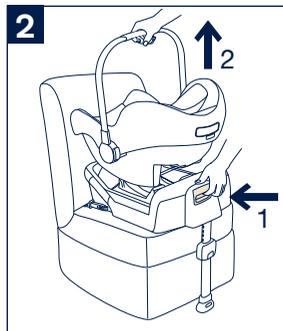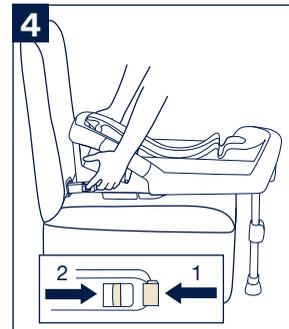

Base Installation Using Vehicle Belt (Lap or Lap/Shoulder Belt)



- 1 - Place vehicle in park and on level ground.
- 2 - Position base in a forward facing vehicle seat. Adjust base so bubble touches line.
- 3 - If necessary, use recline adjustment to position bubble in level indicator to achieve correct angle for installation. Recline adjustment locks into position.
- 4 - To release recline adjustment, press down on lock button located under base.
- 5 - Open the vehicle belt lock off by lifting up.
- 6 - Route the vehicle belt through the opening in the base labeled "belt here" and under the vehicle belt lock off.

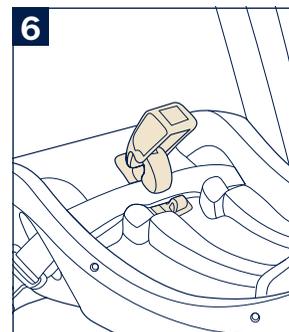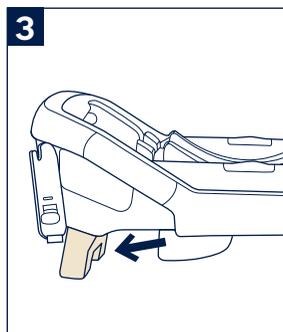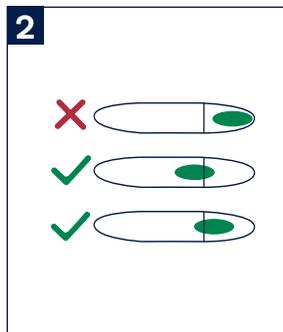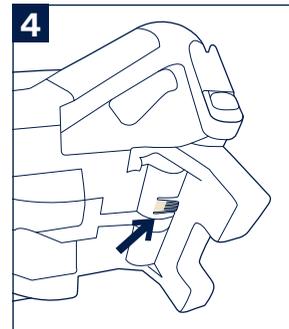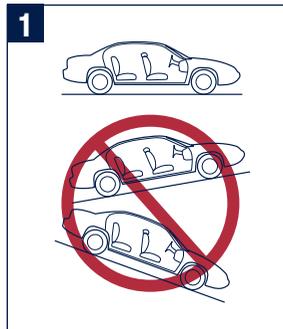

- 1 - Buckle the vehicle belt. Both the shoulder **AND** lap belt must be under the vehicle belt lock off and belts must lay flat.
- 2 - While pressing the base into the vehicle seat (1), tighten the vehicle belt by pulling straight along the belt path (2).
- 3 - While the shoulder belt is tight, hook the bottom of the vehicle belt lock off (1) and press to close (2).

If vehicle only has a lap belt, then put lap belt under vehicle belt lock off.

Additional stability can be achieved with the base by using the stability leg. For instructions on using the stability leg see stability leg section.

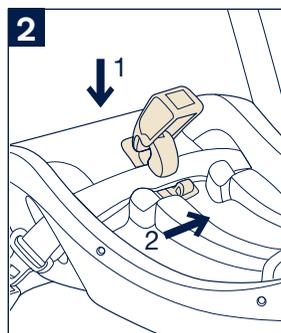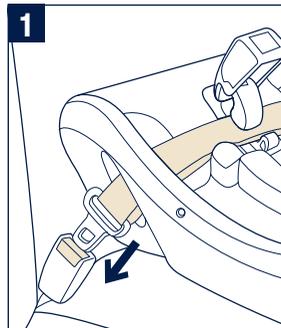

Check the Installation

- Belts must be tight.
- Base should not move side to side more than 1” at belt path.
- Bubble must be touching line.
- Belts and buckles must not interfere with attachment of child restraint to base.
- Vehicle belts must lay flat under vehicle belt lock off.

It is acceptable to install with both rigid latch (lower anchors) and the vehicle belt.

Attaching Child Restraint to Base

- 1 - After child is properly secured in child restraint, press child restraint on base and listen for a click. Pull on child restraint to verify installation.

⚠ DO NOT allow child restraint or handle to contact the vehicle interior (side of car door or seat in front) when installed on base.




Releasing Child Restraint from Base

- 2 - To release the child restraint, squeeze the carrier release button (1) located on the base and then pull the child restraint up (2).

Uninstalling Base (when Installed with Vehicle Belt)

- 3 - To remove the base, lift up on the vehicle belt lock off.
- 4 - Unbuckle the vehicle belt and un-route the shoulder and lap belt from the base.

Then remove the base.

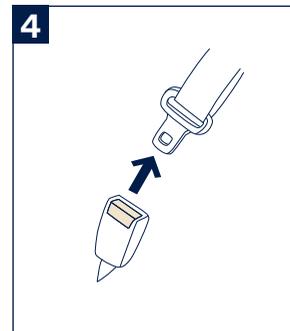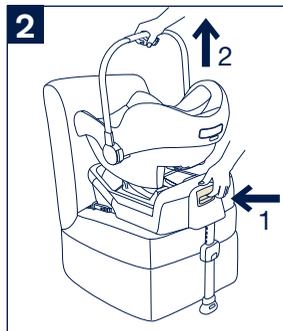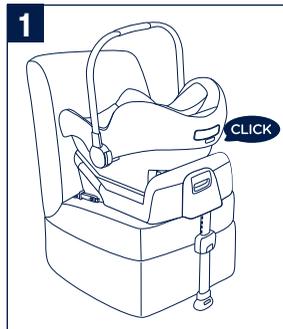

Stability Leg

Refer to vehicle owner's manual to determine if stability leg can be used over a vehicle storage compartment.

- 1 - Unfold the stability leg from the stability leg storage.
- 2 - After correctly installing the base on the vehicle seat, press the stability leg adjustment button to extend the stability leg to the floor.
- 3 - Stability leg should make firm contact with the vehicle floor.
- 4 - Indicators should show green.




⚠ When the stability leg indicator shows red, this means the stability leg is in the wrong position. Make sure the stability leg is secure and makes firm contact with the vehicle floor. The stability leg indicator shows green when it is properly contacting the floor of the vehicle.

- 5 - **DO NOT** use if stability leg lifts base off seat.

⚠ **DO NOT** use stability leg to recline the base. The recline adjustment feature is meant to recline the base.

Always store stability leg when not in use.

This seat is safe to use with stability leg in use or stored for both rigid latch or vehicle belt installation.

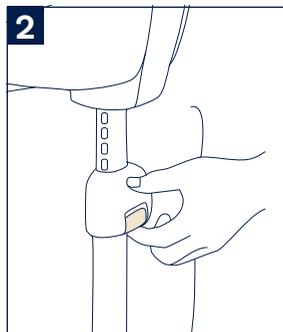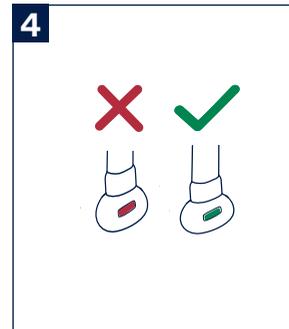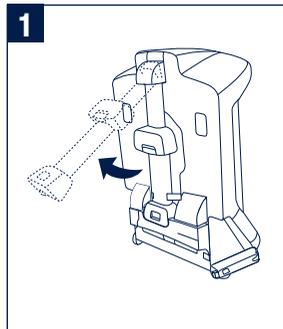

Cleaning and Maintenance

Use only mild detergent, water and a soft cloth to clean the base.

Check regularly if everything functions properly. If any parts are torn, broken, or missing, stop using this product.

For infant carrier cleaning and maintenance, see your carrier instruction manual.

Nuna Baby Essentials, Inc. Nuna and all associated logos are trademarks.

IM-001383C



Nuna Baby Essentials, Inc.

70 Thousand Oaks Blvd. | Morgantown, PA 19543

1.855.NUNA.USA | nunababy.com