



# rava™ next

## Care Instructions

*IMPORTANT! KEEP THESE  
INSTRUCTIONS IN A  
SAFE PLACE THAT IS  
ACCESSIBLE AND AVAILABLE  
FOR QUICK REFERENCE.  
READ CAREFULLY*

**nuna®**

# Contents

<b>Accessory Care</b>	2
Cleaning the Seat Cover and Harness Pads	2
SIP Insert and Pads	2
Infant Insert and Wedge	2
<b>Seat Cover Removal</b>	4
Remove Head Support Cover	6
Remove Cover from Child Restraint	6
<b>Clean Harness Adjuster</b>	8
Harness Function Test	8
To Access Harness Adjuster	8
To Clean Harness Adjuster	10
<b>Seat Cover Assembly</b>	12
<b>Additional Care</b>	14
Cleaning the Harness	14
Cleaning the Shell	14
Cleaning the Buckle	14



**WARNING:** Do not attempt to disassemble the child restraint. Only perform steps shown in this manual.

# Accessory Care

**⚠ WARNING:** Do not attempt to disassemble the child restraint. Only perform steps shown in this manual.

## Cleaning the Seat Cover and Harness Pads

Seat cover and harness pads can be cleaned according to the instructions on the tag attached to the seat cover.

**DO NOT** use bleach or other harsh chemicals to clean your child restraint cover or harness.  
**DO NOT** attempt to iron your child restraint cover.

## SIP Insert and Pads

**1** - Remove SIP Insert pads from SIP insert. Insert pads should be spot cleaned only.

**DO NOT** machine wash the SIP insert pads. SIP insert can be cleaned according to the instructions on the tag attached to the seat cover.



Zip pads back into SIP insert and reinstall before using car seat. SIP insert **MUST** be used for a child up to 40 lb (18 kg). After 40 lb (18 kg), it can be removed when child no longer fits comfortably between the insert's sides.

## Infant Insert and Wedge

**2** - Remove support wedge located on the back side of the infant insert.

Wedge should be spot cleaned only.

**DO NOT** machine wash the wedge. Infant insert can be cleaned according to the instructions on the tag attached to the seat cover.

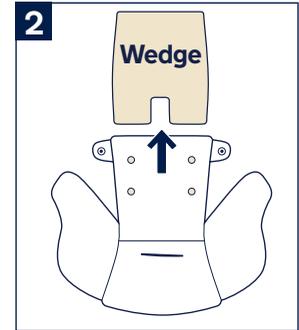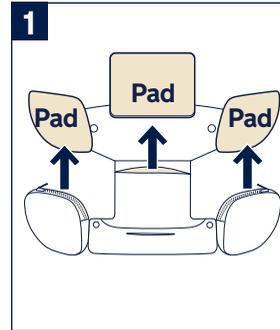

# Seat Cover Removal


**⚠ WARNING:** Do not attempt to disassemble the child restraint. Only perform steps shown in this manual.

**⚠ WARNING: NEVER** use the seat without the seat cover installed.

## 1 - To remove seat pad:

- a Recline child restraint to rear facing position 1 (BLUE).
- b Set head support in highest position.
- c Loosen and unbuckle harness and chest clip.
- d Fully extend calf support.
- e Remove tether from storage anchor.

Remove harness/buckle pads as well as infant and head inserts.

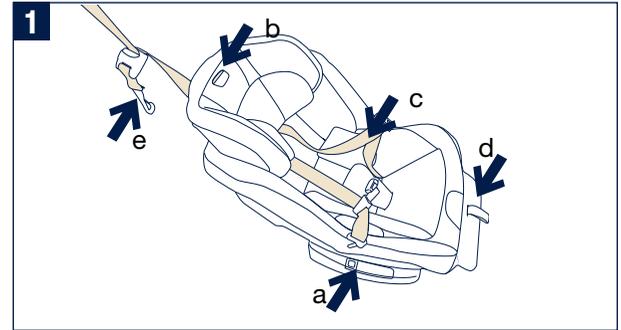







## Remove Head Support Cover

**⚠** Take care when removing head support cover so as not to damage the energy absorbing foam underneath.

- 1** - Remove head support cover.
  - a** Unsnap cover from back of head support.
  - b** Grasp head support cover at top behind head support button.
  - c** Gently peel cover off head support; work on one side then the other. Unsnap cover and remove.

## Remove Cover from Child Restraint

- 2** - Unsnap seat cover **(a)** and disconnect plastic hooks on bottom of calf support **(b)**. Remove seat cover from calf support.
- 3** - Remove cover from child restraint.
  - a** Start at bottom, near calf support, work toward buckle holder.
  - b** Unsnap seat pad from side of seat and pull corner out of retaining channel.
  - c** Continue to the tether.
  - d** Repeat steps A through C for the other side.
- 4** - Flip cover over the top of the child restraint. Slide seat cover off of the tether.

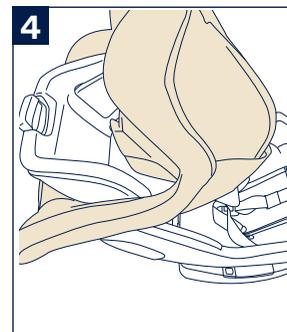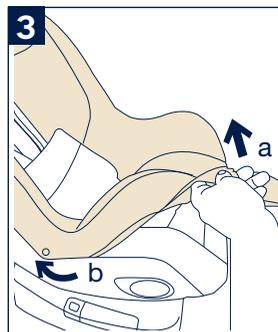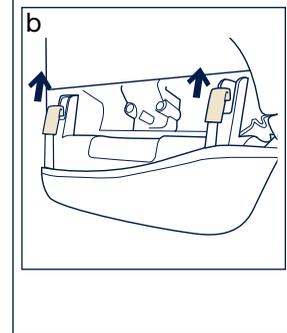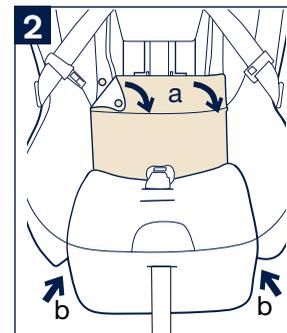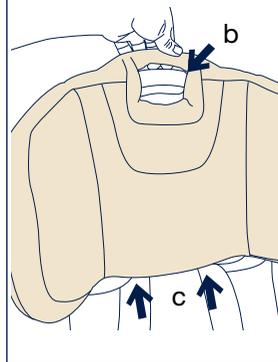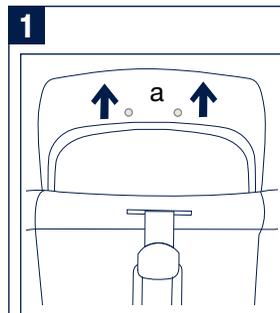


# Clean Harness Adjuster

**⚠ WARNING:** Do not attempt to disassemble the child restraint. Only perform steps shown in this manual.

## Harness Function Test

**PUSH** on back of seat and firmly **PULL** forward on the harness straps without pressing release button.



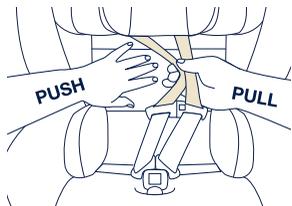


If harness remains tight, harness adjuster is functioning normally.

**⚠** If harness loosens, follow Clean Harness Adjuster steps.

## To Access Harness Adjuster

- 1 - Adjust head support to highest position, unsnap seat cover and pull to front of seat.
- 2 - Remove the two Phillips head screws from the Harness Adjuster cover. **KEEP** screws for reinstall.
- 3 - Remove Harness Adjuster Cover and slide forward on harness till it is out of the way.

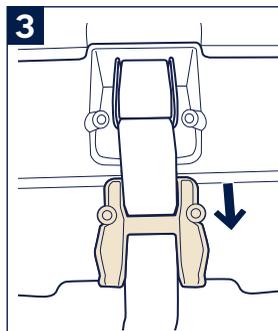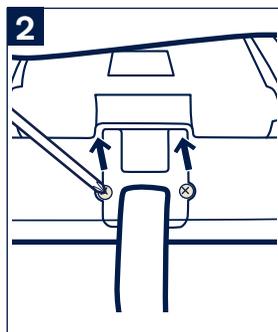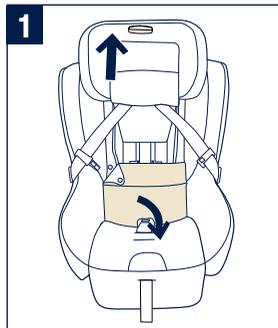

# Clean Harness Adjuster (continued)



## To Clean Harness Adjuster







- 1 - While pressing Harness Adjuster button, use brush included in Care Instructions to brush/scrape the area and each tooth/groove down to where the harness and tooth/grooves meet. Use brush handle to remove stubborn debris.
- 2 - Pull Harness out slightly to help remove debris out of teeth area. Clean each tooth/groove carefully. The recline may need to be reduced to help pull debris away from the teeth.

When fully cleaned, release locking mechanism and re-do **Harness Function Test (p.8)**.

## Reassemble Harness Adjuster

- 3 - Slide Harness Adjuster Cover up harness and reattach Harness Adjuster Cover to the seat.
- 4 - Attach Harness Adjuster Cover with two previously removed Phillips head screws.
- 5 - Replace seat cover in seat.
- 6 - Pull harness strap (1) and buckle (2) through slot in seat cover and snap seat cover back to seat (3).

Repeat Harness Function Test (p.8) with fully assembled child restraint. If harness does not remain tight after reassembly, contact Nuna at 1-855-686-2891 or [info.usa@nunababy.com](mailto:info.usa@nunababy.com) for additional assistance with cleaning.

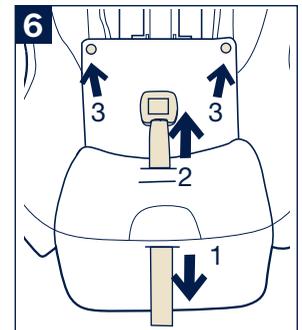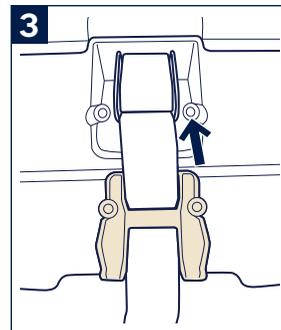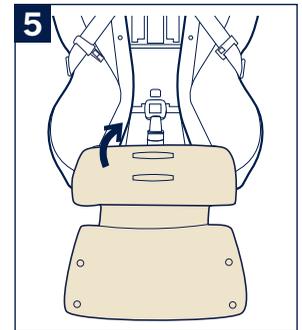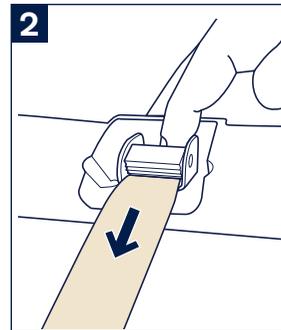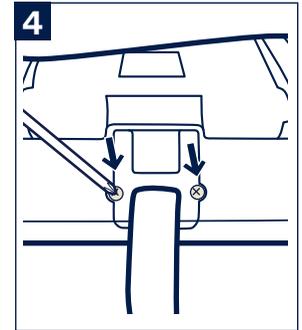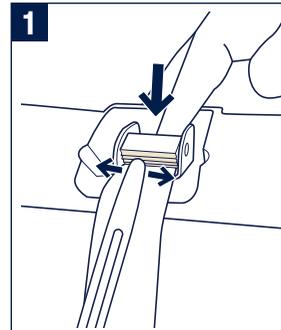

## Seat Cover Assembly

Reverse steps of seat cover removal.



Recline child restraint to rear facing position 1.

**1** - Tuck the seat cover into the retaining channel along the edge of the seat and tuck the corner flap in near the snap attachment.

**2** - With corner flap inserted into retaining channel, push on plastic in corner flap until snap on seat pad aligns with snap attachment **(1)** and secure snap **(2)**.

Pull on seat pad to ensure snap is secured.

Ensure both corner pockets are secured to the outside of the calf support.

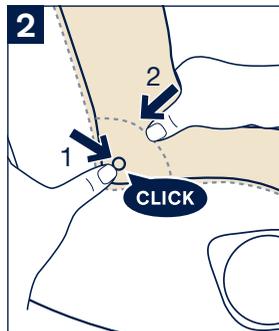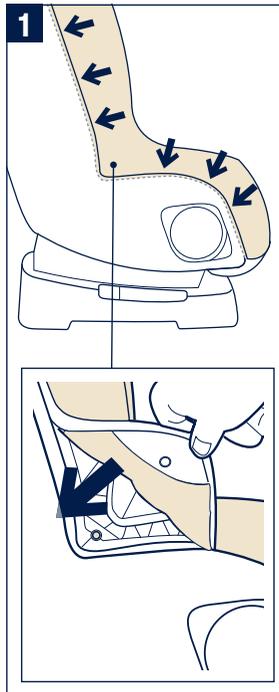

# Additional Care

**⚠ WARNING:** Do not attempt to disassemble the child restraint. Only perform steps shown in this manual.

## Cleaning the Harness

The child restraint harness system cannot be removed. **DO NOT attempt to remove the harness system.** When required, harness may be cleaned with a cloth and warm, soapy water.

Towel dry excess water and allow to air dry.

## Cleaning the Shell

Shell may be cleaned with a damp cloth.

Towel dry.

**DO NOT** use abrasive cleansers on the shell.

**NEVER** use steam or high-pressure cleaning methods on the shell and harness as it is impossible to know or control the effects of these methods on the components performance.

## Cleaning the Buckle

**BUCKLE CANNOT BE REMOVED.**

To clean buckle, wipe with damp cloth.

**DO NOT** use bleach or other harsh chemicals to clean any part of the seat.

**DO NOT** use lubricants in buckle.

**DO NOT** attempt to iron the covers or pads.

Nuna Baby Essentials, Inc. Nuna and all associated logos are trademarks.



Nuna Baby Essentials, Inc.

70 Thousand Oaks Blvd. | Morgantown, PA 19543

1.855.NUNA.USA | nunababy.com